



IML Manuals Available on iPad

King Air 90 Series (IML-90 REV 43) NOV 2012

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
101-590097-13B6	1 Nov 2011	King Air Component Maintenance Manual (All King Airs) - not available in paper
109-590010-19B6	1 Nov 2012	F90 Maintenance Manual - IML-90 Rev 42 adds TR 27-2 (LA-2 & after)
109-590010-21C2	2 Feb 1996	F90 Wiring Diagram Manual (LA-2 thru LA-225)
109-590010-23E1	28 May 1993	F90 Illustrated Parts Catalog (LA-2 & After)
109-590010-79	30 Nov 1984	F90 Wiring Diagram Manual (LA-226 & after)
65-590016-3F9	27 Mar 1998	90/A90/B90/C90/C90A/E90 Illustrated Parts Catalog (LJ-1 thru LJ-501)
90-590012-13B27	1 Nov 2012	90/A90/B90/C90/E90 Maintenance Manual (LJ-1 thru LJ-75; LJ-77 & after; LW-1 & After)
90-590012-15E	6 Jul 1984	90/A90/B90/C90/E90 Wiring Diagram Manual (LJ-1 thru LJ-1062; LW-1 & after)
90-590012-17Q	1 May 2012	C90/E90 Illustrated Parts Catalog (LJ-502 & after; LW-1 & after)
90-590024-11G	1 Nov 2012	C90 Wiring Diagram Manual (LJ-1063 & after)
90-590024-173H	1 Nov 2012	C90GTi Illustrated Parts Catalog (LJ-1769, LJ-1847, LJ-1853 & after) - paper copy discontinued
90-590024-175C	1 Nov 2012	C90GTi Avionics Wiring Diagram Manual (LJ-1847, LJ-1853 & after)
90-590024-187	Dec 2011	King Air 90 Series Airworthiness Limitations Manual (LJ-1 & after; LW-1 & after)
98-39006C8	1 Aug 2012	King Air Structural Inspection Repair Manual (B300 Series, 300, 200 Series, 100 Series, 99 Airliner Series, 90 Series, F90, 88, 65, 70, 80 Series, 50 Series)
98-39117J	1 Nov 2012	King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)

King Air 100 Series (IML-100 REV 13) NOV 2012

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
100-590027-3B7	27 Mar 1998	King Air 100 Illustrated Parts Catalog (B-1 & After; BE-1 & After)
100-590038-17A30	1 Aug 2011	King Air 100 Maintenance Manual (B-1 & After; BE-1 & After) (IML-100 Rev 12 adds TR 27-4)
100-590038-25B2	5 Feb 1982	King Air 100 Series Wiring Diagram Manual (B-1 & after; BE-1 & after)
101-590097-13B6	Nov 2011	King Air Component Maintenance Manual (All King Airs) - not available in paper
98-39006C8	1 Aug 2012	King Air Structural Inspection Repair Manual (B300 Series, 300, 200 Series, 100 Series, 99 Airliner Series, 90 Series, F90, 88, 65, 70, 80 Series, 50 Series)
98-39117J	1 Nov 2012	King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)

King Air 200 Series (IML-200 REV 46) NOV 2012

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
101-590010-133E6	31 Oct 2003	200C/CT, B200C/CT Wiring Diagram Manual (BL-1 & after; BN-1 & after)

101-590010-159R	1 Nov 2012	B200 Illustrated Parts Catalog (BB-734, BB-793, BB-829, BB-854 thru BB-870, BB-874 thru BB-891, BB-894 thru BB-911, BB-913 & After; BT-23 thru BT-27, BT-29 & after; BL-37 & after; BN-2 & after)
101-590010-161G	1 Nov 2008	B200 Wiring Diagram Manual (BB-734, BB-793, BB-829, BB-854 thru BB-870, BB-874 thru BB-891, BB-894, BB-896 thru BB-911, BB-913 & after; BT-23 & after)
101-590010-17F	31 Oct 2003	King Air 200 Illustrated Parts Catalog (BB-2 thru BB-733, BB-735 thru BB-792, BB-794 thru BB-828, BB-830 thru BB-853, BB-871 thru BB-873, BB-892, BB-893, BB-912; BT-1 thru BT-22; BL-1 thru BL-36; BN-1 only)
101-590010-19C12	1 Nov 2012	200 Series Maintenance Manual (BB-2 & after; BL-1 & after; BT-1 & after; BN-1 & after; BY-1 & after; BZ-1 & after)
101-590010-39D4	26 Feb 1999	King Air 200/200T Wiring Diagram Manual (BB-2, BB-6 thru BB-733, BB-735 thru BB-792, BB-794 thru BB-828, BB-830 thru BB-853, BB-871 thru BB-873, BB-892, BB-893, BB-912; BT-1 thru BT-22)
101-590010-433E	1 Feb 2012	King Air B200/T/C/CT Wiring Diagram Manual (BB-1834, BB-1843 & after; BT-47 & after; BL-148 & after; BN-10 & after; BY-1 & after; BZ-1 & after)
101-590010-453C	1 May 2011	Airworthiness Limitations Manual
101-590097-13B6	1 Nov 2011	King Air Component Maintenance Manual (All King Airs) - not available in paper
101-590168-15K	1 Nov 2012	B200GT/CGT Illustrated Parts Catalog (BY-1 & after; BZ-1 & after) (no longer available in paper)
98-39006C8	1 Aug 2012	King Air Structural Inspection Repair Manual (B300 Series, 300, 200 Series, 100 Series, 99 Airliner Series, 90 Series, F90, 88, 65, 70, 80 Series, 50 Series)
98-39117J	1 Nov 2012	King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)
RVSM-B200	--	RVSM Data Package

King Air 300 Series (IML-300 REV 48) NOV 2012

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
101-590097-13B6	1 Nov 2011	King Air Component Maintenance Manual (All King Airs) - not available in paper
101-590097-15D1	18 Dec 1992	King Air 300 Wiring Diagram Manual (FA-2 & After)
101-590097-161	1 May 2011	300/300LW Airworthiness Limitations Manual
101-590097-7C	30 Jun 2004	King Air 300/300W Illustrated Parts Catalog (FA-1 & after)
101-590097-9A35	1 Nov 2012	Model 300/300LW Maintenance Manual FA-2 & after)
130-590031-11A34	1 Nov 2012	B300 (350) Maintenance Manual (FL-1 & after; FM-1 & after)
130-590031-197D	1 Aug 2010	Avionics Wiring Diagram Manual B300/B300C (FL-381, FL-383 & after; FM-12 & after)
130-590031-205A4	14 Sept 2007	350ER Maintenance Manual, Illustrated Parts Catalog and Wiring Diagram Manual Supplement (airplanes w/ Collins HF-9000 (W/ SELCAL), Collins FMS-3000 (with 4 search patterns) and Honeywell LaserRef V Inertial Reference Unit)
130-590031-211C	1 May 2011	Airworthiness Limitations Manual (FL-1 & after; FM-1 & after)
130-590031-247	1 May 2012	350ER/CER Supplements (AMM, IPC, and WDM) - The -247 manual has been superseded and all information transferred to the B300 AMM, WDM, IPC and 350i WDM and IPC.
130-590031-315G	1 Nov 2012	Super King Air 350i/350C Illustrated Parts Catalog (FL-601, FL-672, FL-688 & after with Cabin Management System installed; FM-36 & after)
130-590031-317E	1 May 2012	Super King 350i Wiring Diagram Manual (Interiors) (FL-601, FL-672, FL-688 & after)

130-590031-401	Oct 2010	King Air 350/350C Instructions for Continued Airworthiness for the Zero Interior Configuration
130-590031-7G	1 Nov 2012	B300 Wiring Diagram Manual (FL-1 & after; FM-1 & after)
130-590031-9M	1 Nov 2012	B300 Illustrated Parts Catalog (FL-1 & after; FM-1 & after)
98-39006C8	1 Aug 2012	King Air Structural Inspection Repair Manual (B300 Series, 300, 200 Series, 100 Series, 99 Airliner Series, 90 Series, F90, 88, 65, 70, 80 Series, 50 Series)
98-39117J	1 Nov 2012	KingAir/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)
RVSM-B300	--	RVSM Data Package

Airliner 99 Series (IML-99 REV 14) NOV 2012

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
98-30131A3	1 May 2008	99 Continued Airworthiness Inspection Manual
98-39006C8	1 Aug 2012	King Air Structural Inspection Repair Manual (B300 Series, 300, 200 Series, 100 Series, 99 Airliner Series, 90 Series, F90, 88, 65, 70, 80 Series, 50 Series)
98-39117J	1 Nov 2012	King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)
99-590014K	1 Nov 2012	Illustrated Parts Catalog (99, 99A, A99A, B99)
99-590015-1C2	1 Aug 2012	99 Maintenance Manual (U-1 & after)
99-590028A5	4 Apr 2000	Wiring Diagram Manual (99, 99A, A99A, B99)
99-590030-5B2	13 Feb 1987	Wiring Diagram Manual (C99)
99-590031-1F	1 Nov 2012	Illustrated Parts Catalog (C99)
CD990015-5B4	27 Sept 2002	99 Series Component Maintenance Manual (not available in paper)

Commuter 1900/1900C (IML-1900/C REV 48) NOV 2012

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
114-590021-11B19	May 2011	1900 Series Component Maintenance Manual with TR 21-1 (UA-1 & after; UB-1 & after; UC-1 & after, UE-1 & after) - not available in paper
114-590021-13H	1 Nov 2012	1900C Wiring Diagram Manual (UB-1 thru UB-74)
114-590021-197A6	1 May 2010	Corrosion Control Manual
114-590021-59L	1 Nov 2012	1900C Illustrated Parts Catalog (UC-1 and after)
114-590021-5N	1 Nov 2012	1900C Illustrated Parts Catalog (UA-1 and after; UB-1 and after)
114-590021-61F	1 Nov 2012	1900C Wiring Diagram Manual (UC-1 and after)
114-590021-7C9	1 Nov 2012	1900/C Maintenance Manual (UA-1 & after; UB-1 & after; UC-1 & after)
114-590021-9C1	1 May 2011	1900 Series Structural Repair Manual
129-590000-131G	1 Nov 2012	1900/C/D Kit Supplement Illustrated Parts Catalog (UA-1 and after; UB-1 and after; UC-1 and after; UE-1 and after)
129-590000-133B	1 Oct 2012	1900 Airliner Series Airworthiness Limitations Manual (UA-1 & after; UB-1 & after; UC-1 & after; UE-1 & after)
98-30937G	May 2010	1900C Structural Inspection Manual
98-39117J	1 Nov 2012	King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)

Commuter 1900D (IML-1900D REV 49) NOV 2012

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
114-590021-11B19	May 2011	1900 Series Component Maintenance Manual - not available in paper
114-590021-197A6	1 May 2010	Corrosion Control Manual
114-590021-9C1	1 May 2011	1900 Series Structural Repair Manual
129-590000-109A2	30 Apr 2004	1900D Airliner Maintenance Manual Supplement for Airplanes with the FA2100 Flight Data Recorder Installed (Applicable to 129-590000-15)
129-590000-11L	1 Nov 2012	1900D Illustrated Parts Catalog (UE-1 and after) - not available in paper
129-590000-131G	1 Nov 2012	1900/C/D Kit Supplement Illustrated Parts Catalog (UA-1 and after; UB-1 and after; UC-1 and after; UE-1 and after)
129-590000-133B	1 Oct 2012	1900 Airliner Series Airworthiness Limitations Manual (UA-1 & after; UB-1 & after; UC-1 & after; UE-1 & after)
129-590000-13G	1 Nov 2012	1900D Wiring Diagram Manual (UE-2 and after)
129-590000-15B8	1 Nov 2012	1900D Maintenance Manual (UE-1 and after)
129-590000-65E4	1 Oct 2012	1900D Structural Inspection Manual
98-39117J	1 Nov 2012	King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)