



IML Manuals Available on iPad and Android Mobile Devices

Bonanza A36/B36TC/G36 (IML-36 REV 40) APR 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
33-590010-7H	1 Jul 2012	F33/G33/F33A/F33C Illustrated Parts Catalog (F33 - CD-1235 THRU CD-1254; G33 - CD-1255 thru CD-1304; F33A - CE-290 & after; F33C - CJ-26 & after)
35-590102-11D	1 Apr 2009	A36/B36TC Wiring Diagram Manual (E-1946, E-2104, E-2111 and after; EA-320, EA-389 and after)
35-590102-7B1	3 Sept 1982	33,35,36 Wiring Diagram Manual 14V (CE-613 thru CE-771, except CE-748; CJ-105 thru CJ-148; D-9818 thru D-10119, except D-10097; E-710, E-763 thru E-1240, except E-1111)
35-590102-9E1	29 Jan 1999	F33A, F33C, V35B, A36, A36TC, B36TC Wiring Diagram Manual
36-590001-11B	1 May 2008	G36 Maintenance Manual Supplement for Aircraft with Garmin G1000 Equipment Installed (E-3630, E-3636 & After) - available in CD or IML only
36-590001-13D	1 Jul 2009	G36 Wiring Diagram Manual (E-3630, E-3636 & After)
36-590001-15D	Jan 2011	G36 Avionics Wiring Diagram Manual (E-3630, E-3636 & After)
36-590001-1T	Jan 2013	36/G36 Illustrated Parts Catalog (E-1 & after; EA-1 & after)
36-590001-3B16	1 Apr 2011	A36 Shop Manual (E-1 thru E-1240, except E-1111; EA-1 thru EA-10) w/TR's 2-1, 4-3 & 15-1
36-590001-9C7	1 Apr 2013	33, 35, 36 Maintenance Manual (CE-748, CE-772 and after; CJ-149 and after; D-10097, D-10120 and after, E-1111, E-1241 and after; EA-1 and after)
58-590001-11	1 Apr 2012	Bonanza/Baron Series Structural Inspection and Repair Manual
98-32227S	1 Jul 2012	33/35/36 Inspection Guide
98-36711M	1 Jul 2012	Continuing Care Inspection Guide
98-38999L	1 Jul 2012	Short Inspection Guide

Baron 58 Series (IML-58 REV 41) APR 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
102-590000-21A5	26 Nov 1985	Baron 58P/PA ; 58TC/TCA CMM (TJ-3 & after; TK-1 & after)
102-590000-23E	Jul 1981	58P/TC Wiring Diagram Manual (TJ-2 thru TJ-443, except TJ-436; TK-1 thru TK-56)
102-590000-59	Dec 1983	58P Wiring Diagram Manual (Pressurized) - (TJ-436, TJ-444 & after)
102-590000-5A25	28 Jun 2002	58P/TC Maintenance Manual w/TR 27-3 dated July 2012 (TJ-3 & after; TK-1 & after)
102-590000-7E4	1 Aug 2001	58P/TC Illustrated Parts Catalog (TJ-3 & after; TK-1 & after)
118662Q	Apr 2011	55, 56TC, 58 Long Form Inspection Guide
190-01180-02 REV 2	May 2010	Garmin G1000 System Maintenance Manual for Baron G58 - STC SA01584WI-D
55-590000-13G6	1 Apr 2013	55, 58 Shop Manual (TC-1 & After; TE-1 & after; TH-1 & after)
58-590000-19R	1 Jan 2013	58 Illustrated Parts Catalog (TC-1608 & After, TE-938, TE-943 & After, TH-1 & After)
58-590001-11	1 Apr 2012	Bonanza/Baron Structural Inspection and Repair Manual
58-590001-1C	1 May 2008	Maintenance Manual Supplement (TH-2125 & after) - not available in paper
58-590001-3D	Apr 2013	Wiring Diagram Manual - Electrical (TH-2125 & after)
58-590001-5C	Jan 2011	Wiring Diagram Manual - Avionics (TH-2125 & after)
96-590010-13B3	1 Aug 2001	B55/E55 Illustrated Parts Catalog (TC-1 thru TC-1607; TE-1 thru TE-937, TE-939 thru TE-942)
96-590010-15D1	9 Dec 1983	E55/58 Wiring Diagram Manual (TE-1064 & after; TH-598, TH-648 thru TH-1395, except TH-1389)
96-590010-39	Dec 2006	55/58 Wiring Diagram Manual (TC-1 thru TC-1935, TE-1 thru TE-1063, TH-1 thru 647 except TH-598)
96-590011-15C	19 Mar 1982	Baron B55 Wiring Diagram Manual (TC-1913, TC-1936 & after)

96-590011-29C	1 Apr 2009	58 Electrical Wiring Diagram Manual (TH-1389, TH-1396 thru TH-2124)
98-36712H	Apr 2011	55, 58 Continuing Care Inspection Guide
98-39097J	Apr 2011	55, 56TC, 58 Short Form Inspection Guide

King Air 90 Series (IML-90 REV 44A) JUL 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
101-590097-13B6	1 Nov 2011	King Air Component Maintenance Manual (All King Airs) - not available in paper
109-590010-19B6	1 Nov 2012	F90 Maintenance Manual - IML-90 Rev 42 adds TR 27-2 (LA-2 & after)
109-590010-21C2	2 Feb 1996	F90 Wiring Diagram Manual (LA-2 thru LA-225)
109-590010-23E1	28 May 1993	F90 Illustrated Parts Catalog (LA-2 & After)
109-590010-79	30 Nov 1984	F90 Wiring Diagram Manual (LA-226 & after)
65-590016-3F9	27 Mar 1998	90/A90/B90/C90/C90A/E90 Illustrated Parts Catalog (LJ-1 thru LJ-501)
90-590012-13B28	1 May 2013	90/A90/B90/C90/E90 Maintenance Manual (LJ-1 thru LJ-75; LJ-77 & after; LW-1 & After)
90-590012-15E	6 Jul 1984	90/A90/B90/C90/E90 Wiring Diagram Manual (LJ-1 thru LJ-1062; LW-1 & after)
90-590012-17R	1 May 2013	C90/E90 Illustrated Parts Catalog (LJ-502 & after; LW-1 & after)
90-590024-11H	1 May 2013	C90 Wiring Diagram Manual (LJ-1063 & after)
90-590024-173J	1 May 2013	C90GTi Illustrated Parts Catalog (LJ-1769, LJ-1847, LJ-1853 & after)
90-590024-175C	1 Nov 2012	C90GTi Avionics Wiring Diagram Manual (LJ-1847, LJ-1853 & after)
90-590024-187	Dec 2011	King Air 90 Series Airworthiness Limitations Manual (LJ-1 & after; LW-1 & after)
98-39006C9	1 May 2013	King Air Structural Inspection Repair Manual (B300 Series, 300, 200 Series, 100 Series, 99 Airliner Series, 90 Series, F90, 88, 65, 70, 80 Series, 50 Series)
98-39117J	1 Nov 2012	King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)

King Air 100 Series (IML-100 REV 14) MAY 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
100-590027-3B7	27 Mar 1998	King Air 100 Illustrated Parts Catalog (B-1 & After; BE-1 & After)
100-590038-17A31	1 May 2013	King Air 100 Maintenance Manual (B-1 & After; BE-1 & After)
100-590038-25B2	5 Feb 1982	King Air 100 Series Wiring Diagram Manual (B-1 & after; BE-1 & after)
101-590097-13B6	Nov 2011	King Air Component Maintenance Manual (All King Airs) - not available in paper
98-39006C9	1 May 2013	King Air Structural Inspection Repair Manual (B300 Series, 300, 200 Series, 100 Series, 99 Airliner Series, 90 Series, F90, 88, 65, 70, 80 Series, 50 Series)
98-39117J	1 Nov 2012	King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)

King Air 200 Series (IML-200 REV 47) MAY 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
101-590010-133E6	31 Oct 2003	200C/CT, B200C/CT Wiring Diagram Manual (BL-1 & after; BN-1 & after)
101-590010-159S	1 May 2013	B200 Illustrated Parts Catalog (BB-734, BB-793, BB-829, BB-854 thru BB-870, BB-874 thru BB-891, BB-894 thru BB-911, BB-913 & After; BT-23 thru BT-27, BT-29 & after; BL-37 & after; BN-2 & after)
101-590010-161G	1 Nov 2008	B200 Wiring Diagram Manual (BB-734, BB-793, BB-829, BB-854 thru BB-870, BB-874 thru BB-891, BB-894, BB-896 thru BB-911, BB-913 & after; BT-23 & after)
101-590010-17F	31 Oct 2003	King Air 200 Illustrated Parts Catalog (BB-2 thru BB-733, BB-735 thru BB-792, BB-794 thru BB-828, BB-830 thru BB-853, BB-871 thru BB-873, BB-892, BB-893, BB-912; BT-1 thru BT-22; BL-1 thru BL-36; BN-1 only)
101-590010-19C13	1 May 2013	200 Series Maintenance Manual (BB-2 & after; BL-1 & after; BT-1 & after; BN-1 & after; BY-1 & after; BZ-1 & after)
101-590010-39D4	26 Feb 1999	King Air 200/200T Wiring Diagram Manual (BB-2, BB-6 thru BB-733, BB-735 thru BB-792, BB-794 thru BB-828, BB-830 thru BB-853, BB-871 thru BB-873, BB-892, BB-893, BB-912; BT-1 thru BT-22)
101-590010-433E	1 Feb 2012	King Air B200/T/C/CT Wiring Diagram Manual (BB-1834, BB-1843 & after; BT-47 & after; BL-148 & after; BN-10 & after; BY-1 & after; BZ-1 & after)
101-590010-453C	1 May 2011	Airworthiness Limitations Manual
101-590097-13B6	1 Nov 2011	King Air Component Maintenance Manual (All King Airs) - not available in paper
101-590168-15L	1 May 2013	B200GT/CGT Illustrated Parts Catalog (BY-1 & after; BZ-1 & after)

98-39006C9	1 May 2013	King Air Structural Inspection Repair Manual (B300 Series, 300, 200 Series, 100 Series, 99 Airliner Series, 90 Series, F90, 88, 65, 70, 80 Series, 50 Series)
98-39117J	1 Nov 2012	King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)
RVSM-B200	--	RVSM Data Package

King Air 300 Series (IML-300 REV 49) MAY 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
101-590097-13B6	1 Nov 2011	King Air Component Maintenance Manual (All King Airs) - not available in paper
101-590097-15D1	18 Dec 1992	King Air 300 Wiring Diagram Manual (FA-2 & After)
101-590097-161	1 May 2011	300/300LW Airworthiness Limitations Manual
101-590097-7C	30 Jun 2004	King Air 300/300W Illustrated Parts Catalog (FA-1 & after)
101-590097-9A35	1 Nov 2012	Model 300/300LW Maintenance Manual FA-2 & after)
130-590031-11A35	1 May 2013	B300 (350) Maintenance Manual (FL-1 & after; FM-1 & after)
130-590031-197D	1 Aug 2010	Avionics Wiring Diagram Manual B300/B300C (FL-381, FL-383 & after; FM-12 & after)
130-590031-205A4	14 Sept 2007	350ER Maintenance Manual, Illustrated Parts Catalog and Wiring Diagram Manual Supplement (airplanes w/ Collins HF-9000 (W/ SELCAL), Collins FMS-3000 (with 4 search patterns) and Honeywell LaserRef V Inertial Reference Unit)
130-590031-211C	1 May 2011	Airworthiness Limitations Manual (FL-1 & after; FM-1 & after)
130-590031-247	1 May 2012	350ER/CER Supplements (AMM, IPC, and WDM) - The -247 manual has been superseded and all information transferred to the B300 AMM, WDM, IPC and 350i WDM and IPC.
130-590031-315H	1 May 2013	Super King Air 350i/350C Illustrated Parts Catalog (FL-601, FL-672, FL-688 & after with Cabin Management System installed; FM-36 & after)
130-590031-317F	1 May 2013	Super King 350i Wiring Diagram Manual (Interiors) (FL-601, FL-672, FL-688 & after)
130-590031-401	Oct 2010	King Air 350/350C Instructions for Continued Airworthiness for the Zero Interior Configuration
130-590031-7G	1 Nov 2012	B300 Wiring Diagram Manual (FL-1 & after; FM-1 & after)
130-590031-9N	1 May 2013	B300 Illustrated Parts Catalog (FL-1 & after; FM-1 & after)
98-39006C9	1 May 2013	King Air Structural Inspection Repair Manual (B300 Series, 300, 200 Series, 100 Series, 99 Airliner Series, 90 Series, F90, 88, 65, 70, 80 Series, 50 Series)
98-39117J	1 Nov 2012	KingAir/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)
RVSM-B300	--	RVSM Data Package

Airliner 99 Series (IML-99 REV 15) MAY 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
98-30131A3	1 May 2008	99 Continued Airworthiness Inspection Manual
98-39006C9	1 May 2013	King Air Structural Inspection Repair Manual (B300 Series, 300, 200 Series, 100 Series, 99 Airliner Series, 90 Series, F90, 88, 65, 70, 80 Series, 50 Series)
98-39117J	1 Nov 2012	King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)
99-590014K	1 Nov 2012	Illustrated Parts Catalog (99, 99A, A99A, B99)
99-590015-1C3	1 May 2013	99 Maintenance Manual (U-1 & after)
99-590028A5	4 Apr 2000	Wiring Diagram Manual (99, 99A, A99A, B99)
99-590030-5B2	13 Feb 1987	Wiring Diagram Manual (C99)
99-590031-1F	1 Nov 2012	Illustrated Parts Catalog (C99)
CD990015-5B4	27 Sept 2002	99 Series Component Maintenance Manual (not available in paper)

Commuter 1900/1900C (IML-1900/C REV 49) MAY 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
114-590021-11B19	May 2011	1900 Series Component Maintenance Manual with TR 21-1 (UA-1 & after; UB-1 & after; UC-1 & after, UE-1 & after) - not available in paper
114-590021-13H	1 Nov 2012	1900C Wiring Diagram Manual (UB-1 thru UB-74)
114-590021-197A6	1 May 2010	Corrosion Control Manual
114-590021-59L	1 Nov 2012	1900C Illustrated Parts Catalog (UC-1 and after)
114-590021-5N	1 Nov 2012	1900C Illustrated Parts Catalog (UA-1 and after; UB-1 and after)

114-590021-61F	1 Nov 2012	1900C Wiring Diagram Manual (UC-1 and after)
114-590021-7C9	1 Nov 2012	1900/C Maintenance Manual (UA-1 & after; UB-1 & after; UC-1 & after)
114-590021-9C1	1 May 2011	1900 Series Structural Repair Manual
129-590000-131G	1 Nov 2012	1900/C/D Kit Supplement Illustrated Parts Catalog (UA-1 and after; UB-1 and after; UC-1 and after; UE-1 and after)
129-590000-133B	1 Oct 2012	1900 Airliner Series Airworthiness Limitations Manual (UA-1 & after; UB-1 & after; UC-1 & after; UE-1 & after)
98-30937G2	May 2013	1900C Structural Inspection Manual
98-39117J	1 Nov 2012	King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)

Commuter 1900D (IML-1900D REV 50) MAY 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
114-590021-11B19	May 2011	1900 Series Component Maintenance Manual - not available in paper
114-590021-197A6	1 May 2010	Corrosion Control Manual
114-590021-9C1	1 May 2011	1900 Series Structural Repair Manual
129-590000-109A2	30 Apr 2004	1900D Airliner Maintenance Manual Supplement for Airplanes with the FA2100 Flight Data Recorder Installed (Applicable to 129-590000-15)
129-590000-11L	1 Nov 2012	1900D Illustrated Parts Catalog (UE-1 and after) - not available in paper
129-590000-131G	1 Nov 2012	1900/C/D Kit Supplement Illustrated Parts Catalog (UA-1 and after; UB-1 and after; UC-1 and after; UE-1 and after)
129-590000-133B	1 Oct 2012	1900 Airliner Series Airworthiness Limitations Manual (UA-1 & after; UB-1 & after; UC-1 & after; UE-1 & after)
129-590000-13G	1 Nov 2012	1900D Wiring Diagram Manual (UE-2 and after)
129-590000-15B8	1 Nov 2012	1900D Maintenance Manual (UE-1 and after)
129-590000-65E5	1 May 2013	1900D Structural Inspection Manual
98-39117J	1 Nov 2012	King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)

Hawker 800 (IML-800 REV 58) JUN 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
125/H-20 Rev 18	1 Dec 2012	AMM Chapter 20 Standard Practices - Airframe
25-8PF315-1	Issue 1	Hawker 800/800XP Pressure Refueling Instructions for Aircraft with Ventral Tank
25-8PF317-3	Issue 1	Hawker 800/800XP Pressure Refueling Instructions for Aircraft without Ventral Tank
AFMS-800 Rev 16	1 Jun 2012	Aircraft Flexible Maintenance Schedule (w/TR 2-4 dated Jun 2012)
AMM-125-800-V1-V2 Rev 55	1 Jun 2013	Hawker 800 Maintenance Manual
AMM-125-800-V3 Rev 27	Mar 2009	Aircraft Maintenance Manual - Vol 3
CCM-125 Rev 3	Jan 2008	Corrosion Control Manual
CJE-HPA-C-GEN-AW1667 Issue 10	10 Mar 2012	Airworthiness Limitations Document (not available in paper)
IPC-125-800 Rev 56	Dec 2012	Illustrated Parts Catalog (not available in paper)
ITEM-125-1/1000 Rev 6	1 Dec 2012	Illustrated Tool and Equipment Manual
MOP 306094A6	1 Dec 2012	Maintenance & Operational Procedures for the Master Minimum Equipment List (MMEL) (not available in paper)
NDT-125-1/800 Rev 32	Jan 2008	Non-Destructive Test Manual
OM-125-800 Rev 32	1 Dec 2012	800/800XP/850XP/750/900XP Overhaul Manual
PBM-125-800 Rev 3	Mar 2003	Power Plant Build Manual
RVSM Data - 800		Reduced Vertical Separation Minimum (RVSM) Data Pkg for Hawker 800
SRM-125-800 Rev 41	1 Jun 2013	Structural Repair Manual (Hawker 800/800XP/850XP/750/900XP)
SWD-125-800 Rev 1	Aug 2001	Schematic WDM (258091 thru 258276 except 258266). Note: this document may be used as reference only for the 800XP. There is no 800XP schematic wiring diagram manual.
WPC-125-800 Rev 20	Jun 2013	Wiring Parts Catalog (258091 thru 258276 except 258266) (not available in paper)

Hawker 800XP/850XP (IML-800XP REV 63) JUN 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
125/H-20 Rev 18	1 Dec 2012	AMM Chapter 20 Standard Practices - Airframe
140-590032-0011K	1 Mar 2013	Wiring Parts Catalog (with Pro Line 21 Avionics) (not available in paper)
140-590032-0013A24	Jun 2013	Aircraft Maintenance Manual (with Pro Line 21 Avionics)
140-590032-0025D2	Apr 2009	Ground Handling Checklist
140-590032-0131	1 Jun 2013	ICA - 900XP with Kit 140-9004
140-590037-0089A2	1 Jun 2013	Power Plant Build Manual (for Hawker 800XP/850X) with Kit 140-9004)
25-8PF315-1	Issue 1	Hawker 800/800XP Pressure Refueling Instructions for Aircraft with Ventral Tank
25-8PF317-3	Issue 1	Hawker 800/800XP Pressure Refueling Instructions for Aircraft without Ventral Tank
AFMS-800XP Rev 27	1 Jun 2013	Aircraft Flexible Maintenance Schedule
AMM-800XP-V1-V2-V3 Rev 32	1 Jun 2013	Aircraft Maintenance Manual
CCM-125 Rev 3	Jan 2008	Corrosion Control Manual
CJE-HPA-C-GEN-AW1667 Issue 10	10 Mar 2012	Airworthiness Limitations Document
IPC-800XP Rev 35	1 Jun 2013	Illustrated Parts Catalog (not available in paper)
ITEM-125-1/1000 Rev 6	1 Dec 2012	Illustrated Tool and Equipment Manual
MMA-800XP Rev 19	1 Jun 2013	Aircraft Maintenance Manual Addenda
MOP 306094A6	1 Dec 2012	Maintenance & Operational Procedures for the Master Minimum Equipment List (MMEL)
NDT-125-1/800 Rev 32	Jan 2008	Non-Destructive Test Manual
OM-125-800 Rev 32	1 Dec 2012	800/800XP/850XP/750/900XP Overhaul Manual
PATS-IPC-RP-693	Jun 1996	Hawker 800XP GTCP36-150W Auxiliary Power Unit Illustrated Parts Catalog
PATS-MM-RP-720 APPENDIX A	Jan 2008	PATS 800XP/850XP/750/900XP GTCP36-150W APU Maintenance Manual Supplement Appendix
PBM-800XP Rev 4	Jan 2008	Power Plant Build Manual
RVSM DATA - 800XP		Reduced Vertical Separation Minimum (RVSM) Data Pkg for Hawker 800XP/850XP
SRM-125-800 Rev 41	1 Jun 2013	Structural Repair Manual (Hawker 800/800XP/850XP/750/900XP)
WPC-800XP Rev 21	1 Dec 2012	Wiring Parts Catalog (258266, 258277 thru 258540, 258542 thru 258555, 258557 thru 258566) (not available in paper)

Hawker 800/800XP/850XP (IML-800/800XP) (SEE INDIVIDUAL P/N)

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
		(All publications listed in IML-800 and IML-800XP/850XP)

Hawker 750 (IML-750 REV 23) JUN 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
125/H-20 Rev 18	1 Dec 2012	AMM Chapter 20 Standard Practices - Airframe
140-590032-0025D2	Apr 2009	Ground Handling Checklist
140-590039-0011K	1 Mar 2013	Hawker 750 Wiring Parts Catalog
140-590039-0013A11	1 Mar 2013	Hawker 750 Aircraft Maintenance Manual
140-590039-0027A6	1 Jun 2013	Hawker 750 Maintenance Manual Addenda
140-590039-0091L	1 Mar 2013	Hawker 750 Illustrated Parts Catalog
140-590039-PRF	Jul 2007	Pressure Refueling Instructions
AFMS-800XP Rev 27	1 Jun 2013	Aircraft Flexible Maintenance Schedule
CCM-125 Rev 3	Jan 2008	Corrosion Control Manual
CJE-HPA-C-GEN-AW1667 Issue 10	Mar 2012	Airworthiness Limitations Document
ITEM-125-1/1000 Rev 6	1 Dec 2012	Illustrated Tools and Equipment Manual
MOP 306094A6	1 Dec 2012	Maintenance & Operational Procedures for the Master Minimum Equipment List (MMEL)

NDT-125-1/800 Rev 32	Jan 2008	Non-Destructive Test Manual
OM-125-800 Rev 32	1 Dec 2012	800/800XP/850XP/900XP/750 Overhaul Manual
PATS-MM-RP-720 APPENDIX A	Jan 2008	PATS 800XP/850XP/750/900XP GTCP36-150W APU MAINTENANCE MANUAL SUPPLEMENT APPENDIX
PBM-800XP Rev 4	Jan 2008	Power Plant Build Manual
RVSM Data - 750		Reduced Vertical Separation Minimum (RVSM) Data Pkg for Hawker 750
SRM-125-800 Rev 41	1 Jun 2013	Structural Repair Manual (Hawker 800/800XP/850XP/900XP/750)

Hawker 900XP (IML-900XP REV 24) JUN 2013

Part Number	Pub Date	Description
125/H-20 Rev 18	1 Dec 2012	AMM Chapter 20 Standard Practices - Airframe
140-590032-0025D2	Apr 2009	Ground Handling Checklist
140-590037-0011K	1 Mar 2013	Hawker 900XP Wiring Parts Catalog (not available in paper)
140-590037-0013A11	1 Mar 2013	Aircraft Maintenance Manual
140-590037-0027A7	1 Jun 2013	Hawker 900XP Maintenance Manual Addenda
140-590037-0089A2	1 Jun 2013	Hawker 900XP Power Plant Build Manual
140-590037-0091K	1 Mar 2013	Hawker 900XP Illustrated Parts Catalog (not available in paper)
140-590037-PRF	Jul 2007	Pressure Refueling Instructions
AFMS-800XP Rev 27	1 Jun 2013	Aircraft Flexible Maintenance Schedule
CCM-125 Rev 3	Jan 2008	Corrosion Control Manual
CJE-HPA-C-GEN- AW1667 Issue 10	1 Mar 2012	Airworthiness Limitations Document (not available in paper)
ITEM-125-1/1000 Rev 6	1 Dec 2012	Illustrated Tool & Equipment Manual
MOP 306094A6	1 Dec 2012	Maintenance & Operational Procedures for the Master Minimum Equipment List (MMEL) (not available in paper)
NDT-125-1/800 Rev 32	Jan 2008	Non-Destructive Test Manual
OM-125-800 Rev 32	1 Dec 2012	800/800XP/850XP/750/900XP Overhaul Manual
PATS-MM-RP-720 APPENDIX A	Jan 2008	PATS 800XP/850XP/750/900XP GTCP36-150W APU Maintenance Manual Supplement Appendix
RVSM DATA - 900XP		Reduced Vertical Separation Minimum (RVSM) Data Pkg for Hawker 900XP
SRM-125-800 Rev 41	1 Jun 2013	Structural Repair Manual (Hawker 800/800XP/850XP/750/900XP)