



IML Manuals Available on iPad and Android Mobile Devices

Bonanza A36/B36TC/G36 (IML-36 REV 41) OCT 2013

| <u>Part Number</u> | <u>Pub Date</u> | <u>Description</u> |
|--------------------|-----------------|--|
| 33-590010-7H | 1 Jul 2012 | F33/G33/F33A/F33C Illustrated Parts Catalog (F33 - CD-1235 THRU CD-1254; G33 - CD-1255 thru CD-1304; F33A - CE-290 & after; F33C - CJ-26 & after) |
| 35-590102-11D | 1 Apr 2009 | A36/B36TC Wiring Diagram Manual (E-1946, E-2104, E-2111 and after; EA-320, EA-389 and after) |
| 35-590102-5E4 | Jan 1981 | V35B Illustrated Parts Catalog (D-9069 & after) |
| 35-590102-7B1 | 3 Sept 1982 | 33,35,36 Wiring Diagram Manual 14V (CE-613 thru CE-771, except CE-748; CJ-105 thru CJ-148; D-9818 thru D-10119, except D-10097; E-710, E-763 thru E-1240, except E-1111) |
| 35-590102-9E1 | 29 Jan 1999 | F33A, F33C, V35B, A36, A36TC, B36TC Wiring Diagram Manual |
| 36-590001-11B | 1 May 2008 | G36 Maintenance Manual Supplement for Aircraft with Garmin G1000 Equipment Installed (E-3630, E-3636 & After) - available in CD or IML only |
| 36-590001-13E | 1 Oct 2013 | G36 Wiring Diagram Manual (E-3630, E-3636 & After) |
| 36-590001-15D | Jan 2011 | G36 Avionics Wiring Diagram Manual (E-3630, E-3636 & After) |
| 36-590001-1T | Jan 2013 | 36/G36 Illustrated Parts Catalog (E-1 & after; EA-1 & after) |
| 36-590001-3B16 | 1 Apr 2011 | A36 Shop Manual (E-1 thru E-1240, except E-1111; EA-1 thru EA-10) w/TR's 2-1, 4-3 & 15-1 |
| 36-590001-9C7 | 1 Apr 2013 | 33, 35, 36 Maintenance Manual (CE-748, CE-772 and after; CJ-149 and after; D-10097, D-10120 and after, E-1111, E-1241 and after; EA-1 and after) |
| 58-590001-11 | 1 Apr 2012 | Bonanza/Baron Series Structural Inspection and Repair Manual |
| 98-32227S | 1 Jul 2012 | 33/35/36 Inspection Guide |
| 98-36711M | 1 Jul 2012 | Continuing Care Inspection Guide |
| 98-38999L | 1 Jul 2012 | Short Inspection Guide |

Baron 58 Series (IML-58 REV 42) OCT 2013

| <u>Part Number</u> | <u>Pub Date</u> | <u>Description</u> |
|--------------------|-----------------|---|
| 102-590000-21A5 | 26 Nov 1985 | Baron 58P/PA ; 58TC/TCA CMM (TJ-3 & after; TK-1 & after) |
| 102-590000-23E | Jul 1981 | 58P/TC Wiring Diagram Manual (TJ-2 thru TJ-443, except TJ-436; TK-1 thru TK-56) |
| 102-590000-59 | Dec 1983 | 58P Wiring Diagram Manual (Pressurized) - (TJ-436, TJ-444 & after) |
| 102-590000-5A25 | 28 Jun 2002 | 58P/TC Maintenance Manual w/TR 27-3 dated July 2012 (TJ-3 & after; TK-1 & after) |
| 102-590000-7E4 | 1 Aug 2001 | 58P/TC Illustrated Parts Catalog (TJ-3 & after; TK-1 & after) |
| 118662Q | Apr 2011 | 55, 56TC, 58 Long Form Inspection Guide |
| 190-01180-02 REV 2 | May 2010 | Garmin G1000 System Maintenance Manual for Baron G58 - STC SA01584WI-D |
| 55-590000-13G7 | 1 Oct 2013 | 55, 58 Shop Manual (TC-1 & After; TE-1 & after; TH-1 & after) |
| 58-590000-19R | 1 Jan 2013 | 58 Illustrated Parts Catalog (TC-1608 & After, TE-938, TE-943 & After, TH-1 & After) |
| 58-590001-11 | 1 Apr 2012 | Bonanza/Baron Structural Inspection and Repair Manual |
| 58-590001-1C | 1 May 2008 | Maintenance Manual Supplement (TH-2125 & after) - not available in paper |
| 58-590001-3D | Apr 2013 | Wiring Diagram Manual - Electrical (TH-2125 & after) |
| 58-590001-5C | Jan 2011 | Wiring Diagram Manual - Avionics (TH-2125 & after) |
| 96-590010-13B3 | 1 Aug 2001 | B55/E55 Illustrated Parts Catalog (TC-1 thru TC-1607; TE-1 thru TE-937, TE-939 thru TE-942) |
| 96-590010-15D1 | 9 Dec 1983 | E55/58 Wiring Diagram Manual (TE-1064 & after; TH-598, TH-648 thru TH-1395, except TH-1389) |
| 96-590010-39 | Dec 2006 | 55/58 Wiring Diagram Manual (TC-1 thru TC-1935, TE-1 thru TE-1063, TH-1 thru 647 except TH-598) |

| | | |
|---------------|-------------|---|
| 96-590011-15C | 19 Mar 1982 | Baron B55 Wiring Diagram Manual (TC-1913, TC-1936 & after) |
| 96-590011-29C | 1 Apr 2009 | 58 Electrical Wiring Diagram Manual (TH-1389, TH-1396 thru TH-2124) |
| 98-36712H | Apr 2011 | 55, 58 Continuing Care Inspection Guide |
| 98-39097J | Apr 2011 | 55, 56TC, 58 Short Form Inspection Guide |

King Air 90 Series (IML-90 REV 45) AUG 2013

| <u>Part Number</u> | <u>Pub Date</u> | <u>Description</u> |
|--------------------|-----------------|---|
| 101-590097-13B7 | 1 Aug 2013 | King Air Component Maintenance Manual (All King Airs) |
| 109-590010-19B6 | 1 Nov 2012 | F90 Maintenance Manual - IML-90 Rev 42 adds TR 27-2 (LA-2 & after) |
| 109-590010-21C2 | 2 Feb 1996 | F90 Wiring Diagram Manual (LA-2 thru LA-225) |
| 109-590010-23E1 | 28 May 1993 | F90 Illustrated Parts Catalog (LA-2 & After) |
| 109-590010-79 | 30 Nov 1984 | F90 Wiring Diagram Manual (LA-226 & after) |
| 65-590016-3F9 | 27 Mar 1998 | 90/A90/B90/C90/C90A/E90 Illustrated Parts Catalog (LJ-1 thru LJ-501) |
| 90-590012-13B28 | 1 May 2013 | 90/A90/B90/C90/E90 Maintenance Manual (LJ-1 thru LJ-75; LJ-77 & after; LW-1 & After) |
| 90-590012-15E | 6 Jul 1984 | 90/A90/B90/C90/E90 Wiring Diagram Manual (LJ-1 thru LJ-1062; LW-1 & after) |
| 90-590012-17R | 1 May 2013 | C90/E90 Illustrated Parts Catalog (LJ-502 & after; LW-1 & after) |
| 90-590024-11H | 1 May 2013 | C90 Wiring Diagram Manual (LJ-1063 & after) |
| 90-590024-173J | 1 May 2013 | C90GTi Illustrated Parts Catalog (LJ-1769, LJ-1847, LJ-1853 & after) |
| 90-590024-175C | 1 Nov 2012 | C90GTi Avionics Wiring Diagram Manual (LJ-1847, LJ-1853 & after) |
| 90-590024-187 | Dec 2011 | King Air 90 Series Airworthiness Limitations Manual (LJ-1 & after; LW-1 & after) |
| 98-39006C9 | 1 May 2013 | King Air Structural Inspection Repair Manual (B300 Series, 300, 200 Series, 100 Series, 99 Airliner Series, 90 Series, F90, 88, 65, 70, 80 Series, 50 Series) |
| 98-39117J | 1 Nov 2012 | King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series) |

King Air 100 Series (IML-100 REV 15) AUG 2013

| <u>Part Number</u> | <u>Pub Date</u> | <u>Description</u> |
|--------------------|-----------------|---|
| 100-590027-3B7 | 27 Mar 1998 | King Air 100 Illustrated Parts Catalog (B-1 & After; BE-1 & After) |
| 100-590038-17A31 | 1 May 2013 | King Air 100 Maintenance Manual (B-1 & After; BE-1 & After) |
| 100-590038-25B2 | 5 Feb 1982 | King Air 100 Series Wiring Diagram Manual (B-1 & after; BE-1 & after) |
| 101-590097-13B7 | 1 Aug 2013 | King Air Component Maintenance Manual (All King Airs) |
| 98-39006C9 | 1 May 2013 | King Air Structural Inspection Repair Manual (B300 Series, 300, 200 Series, 100 Series, 99 Airliner Series, 90 Series, F90, 88, 65, 70, 80 Series, 50 Series) |
| 98-39117J | 1 Nov 2012 | King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series) |

King Air 200 Series (IML-200 REV 48) AUG 2013

| <u>Part Number</u> | <u>Pub Date</u> | <u>Description</u> |
|--------------------|-----------------|--|
| 101-590010-133E6 | 31 Oct 2003 | 200C/CT, B200C/CT Wiring Diagram Manual (BL-1 & after; BN-1 & after) |
| 101-590010-159S | 1 May 2013 | B200 Illustrated Parts Catalog (BB-734, BB-793, BB-829, BB-854 thru BB-870, BB-874 thru BB-891, BB-894 thru BB-911, BB-913 & After; BT-23 thru BT-27, BT-29 & after; BL-37 & after; BN-2 & after) |
| 101-590010-161G | 1 Nov 2008 | B200 Wiring Diagram Manual (BB-734, BB-793, BB-829, BB-854 thru BB-870, BB-874 thru BB-891, BB-894, BB-896 thru BB-911, BB-913 & after; BT-23 & after) |
| 101-590010-17F | 31 Oct 2003 | King Air 200 Illustrated Parts Catalog (BB-2 thru BB-733, BB-735 thru BB-792, BB-794 thru BB-828, BB-830 thru BB-853, BB-871 thru BB-873, BB-892, BB-893, BB-912; BT-1 thru BT-22; BL-1 thru BL-36; BN-1 only) |
| 101-590010-19C13 | 1 May 2013 | 200 Series Maintenance Manual (BB-2 & after; BL-1 & after; BT-1 & after; BN-1 & after; BY-1 & after; BZ-1 & after) |
| 101-590010-39D4 | 26 Feb 1999 | King Air 200/200T Wiring Diagram Manual (BB-2, BB-6 thru BB-733, BB-735 thru BB-792, BB-794 thru BB-828, BB-830 thru BB-853, BB-871 thru BB-873, BB-892, BB-893, BB-912; BT-1 thru BT-22) |
| 101-590010-433E | 1 Feb 2012 | King Air B200/T/C/CT Wiring Diagram Manual (BB-1834, BB-1843 & after; BT-47 & after; BL-148 & after; BN-10 & after; BY-1 & after; BZ-1 & after) |
| 101-590010-453C | 1 May 2011 | Airworthiness Limitations Manual |
| 101-590097-13B7 | 1 Aug 2013 | King Air Component Maintenance Manual (All King Airs) |

| | | |
|----------------|------------|---|
| 101-590168-15L | 1 May 2013 | B200GT/CGT Illustrated Parts Catalog (BY-1 & after; BZ-1 & after) |
| 98-39006C9 | 1 May 2013 | King Air Structural Inspection Repair Manual (B300 Series, 300, 200 Series, 100 Series, 99 Airliner Series, 90 Series, F90, 88, 65, 70, 80 Series, 50 Series) |
| 98-39117J | 1 Nov 2012 | King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series) |
| RVSM-B200 | -- | RVSM Data Package |

King Air 300 Series (IML-300 REV 50) AUG 2013

| <u>Part Number</u> | <u>Pub Date</u> | <u>Description</u> |
|--------------------|-----------------|---|
| 101-590097-13B7 | 1 Aug 2013 | King Air Component Maintenance Manual (All King Airs) |
| 101-590097-15D1 | 18 Dec 1992 | King Air 300 Wiring Diagram Manual (FA-2 & After) |
| 101-590097-161 | 1 May 2011 | 300/300LW Airworthiness Limitations Manual |
| 101-590097-7C | 30 Jun 2004 | King Air 300/300W Illustrated Parts Catalog (FA-1 & after) |
| 101-590097-9A35 | 1 Nov 2012 | Model 300/300LW Maintenance Manual FA-2 & after) |
| 130-590031-11A35 | 1 May 2013 | B300 (350) Maintenance Manual (FL-1 & after; FM-1 & after) |
| 130-590031-197D | 1 Aug 2010 | Avionics Wiring Diagram Manual B300/B300C (FL-381, FL-383 & after; FM-12 & after) |
| 130-590031-205A4 | 14 Sept 2007 | 350ER Maintenance Manual, Illustrated Parts Catalog and Wiring Diagram Manual Supplement (airplanes w/ Collins HF-9000 (W/ SELCAL), Collins FMS-3000 (with 4 search patterns) and Honeywell LaserRef V Inertial Reference Unit) |
| 130-590031-211C | 1 May 2011 | Airworthiness Limitations Manual (FL-1 & after; FM-1 & after) |
| 130-590031-247 | 1 May 2012 | 350ER/CER Supplements (AMM, IPC, and WDM) - The -247 manual has been superseded and all information transferred to the B300 AMM, WDM, IPC and 350i WDM and IPC. |
| 130-590031-315H | 1 May 2013 | Super King Air 350i/350C Illustrated Parts Catalog (FL-601, FL-672, FL-688 & after with Cabin Management System installed; FM-36 & after) |
| 130-590031-317F | 1 May 2013 | Super King 350i Wiring Diagram Manual (Interiors) (FL-601, FL-672, FL-688 & after) |
| 130-590031-401 | Oct 2010 | King Air 350/350C Instructions for Continued Airworthiness for the Zero Interior Configuration |
| 130-590031-7G | 1 Nov 2012 | B300 Wiring Diagram Manual (FL-1 & after; FM-1 & after) |
| 130-590031-9N | 1 May 2013 | B300 Illustrated Parts Catalog (FL-1 & after; FM-1 & after) |
| 98-39006C9 | 1 May 2013 | King Air Structural Inspection Repair Manual (B300 Series, 300, 200 Series, 100 Series, 99 Airliner Series, 90 Series, F90, 88, 65, 70, 80 Series, 50 Series) |
| 98-39117J | 1 Nov 2012 | KingAir/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series) |
| RVSM-B300 | -- | RVSM Data Package |

Airliner 99 Series (IML-99 REV 15) MAY 2013

| <u>Part Number</u> | <u>Pub Date</u> | <u>Description</u> |
|--------------------|-----------------|---|
| 98-30131A3 | 1 May 2008 | 99 Continued Airworthiness Inspection Manual |
| 98-39006C9 | 1 May 2013 | King Air Structural Inspection Repair Manual (B300 Series, 300, 200 Series, 100 Series, 99 Airliner Series, 90 Series, F90, 88, 65, 70, 80 Series, 50 Series) |
| 98-39117J | 1 Nov 2012 | King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series) |
| 99-590014K | 1 Nov 2012 | Illustrated Parts Catalog (99, 99A, A99A, B99) |
| 99-590015-1C3 | 1 May 2013 | 99 Maintenance Manual (U-1 & after) |
| 99-590028A5 | 4 Apr 2000 | Wiring Diagram Manual (99, 99A, A99A, B99) |
| 99-590030-5B2 | 13 Feb 1987 | Wiring Diagram Manual (C99) |
| 99-590031-1F | 1 Nov 2012 | Illustrated Parts Catalog (C99) |
| CD990015-5B4 | 27 Sept 2002 | 99 Series Component Maintenance Manual (not available in paper) |

Commuter 1900/1900C (IML-1900/C REV 49) MAY 2013

| <u>Part Number</u> | <u>Pub Date</u> | <u>Description</u> |
|--------------------|-----------------|---|
| 114-590021-11B19 | May 2011 | 1900 Series Component Maintenance Manual with TR 21-1 (UA-1 & after; UB-1 & after; UC-1 & after; UE-1 & after) - not available in paper |
| 114-590021-13H | 1 Nov 2012 | 1900C Wiring Diagram Manual (UB-1 thru UB-74) |
| 114-590021-197A6 | 1 May 2010 | Corrosion Control Manual |
| 114-590021-59L | 1 Nov 2012 | 1900C Illustrated Parts Catalog (UC-1 and after) |

| | | |
|-----------------|------------|--|
| 114-590021-5N | 1 Nov 2012 | 1900C Illustrated Parts Catalog (UA-1 and after; UB-1 and after) |
| 114-590021-61F | 1 Nov 2012 | 1900C Wiring Diagram Manual (UC-1 and after) |
| 114-590021-7C9 | 1 Nov 2012 | 1900/C Maintenance Manual (UA-1 & after; UB-1 & after; UC-1 & after) |
| 114-590021-9C1 | 1 May 2011 | 1900 Series Structural Repair Manual |
| 129-590000-131G | 1 Nov 2012 | 1900/C/D Kit Supplement Illustrated Parts Catalog (UA-1 and after; UB-1 and after; UC-1 and after; UE-1 and after) |
| 129-590000-133B | 1 Oct 2012 | 1900 Airliner Series Airworthiness Limitations Manual (UA-1 & after; UB-1 & after; UC-1 & after; UE-1 & after) |
| 98-30937G2 | May 2013 | 1900C Structural Inspection Manual |
| 98-39117J | 1 Nov 2012 | King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series) |

Commuter 1900D (IML-1900D REV 50) MAY 2013

| <u>Part Number</u> | <u>Pub Date</u> | <u>Description</u> |
|--------------------|-----------------|---|
| 114-590021-11B19 | May 2011 | 1900 Series Component Maintenance Manual - not available in paper |
| 114-590021-197A6 | 1 May 2010 | Corrosion Control Manual |
| 114-590021-9C1 | 1 May 2011 | 1900 Series Structural Repair Manual |
| 129-590000-109A2 | 30 Apr 2004 | 1900D Airliner Maintenance Manual Supplement for Airplanes with the FA2100 Flight Data Recorder Installed (Applicable to 129-590000-15) |
| 129-590000-11L | 1 Nov 2012 | 1900D Illustrated Parts Catalog (UE-1 and after) - not available in paper |
| 129-590000-131G | 1 Nov 2012 | 1900/C/D Kit Supplement Illustrated Parts Catalog (UA-1 and after; UB-1 and after; UC-1 and after; UE-1 and after) |
| 129-590000-133B | 1 Oct 2012 | 1900 Airliner Series Airworthiness Limitations Manual (UA-1 & after; UB-1 & after; UC-1 & after; UE-1 & after) |
| 129-590000-13G | 1 Nov 2012 | 1900D Wiring Diagram Manual (UE-2 and after) |
| 129-590000-15B8 | 1 Nov 2012 | 1900D Maintenance Manual (UE-1 and after) |
| 129-590000-65E5 | 1 May 2013 | 1900D Structural Inspection Manual |
| 98-39117J | 1 Nov 2012 | King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series) |

Beechjet/Hawker 400XP (IML-400/A REV 48) OCT 2013

| <u>Part Number</u> | <u>Pub Date</u> | <u>Description</u> |
|--------------------|-----------------|--|
| 128-590001-11P | 1 Jan 2013 | Beechjet 400/A/Hawker 400XP Illustrated Parts Catalog (RJ-1 & after; RK-1 & after) |
| 128-590001-147C1 | 1 Dec 2007 | Beechjet 400/A/Hawker 400XP Wiring Diagram Manual (RK-45, RK-49 and after) |
| 128-590001-17C13 | 1 Oct 2013 | 400/A Structural Repair Manual |
| 128-590001-183B | 1 Jul 2007 | 400A Printed Circuit Board Manual (RK-1 & after) - applies to 400XP |
| 128-590001-19B1 | 20 Dec 1999 | 400 Wiring Diagram Manual (RJ-1 thru RJ-65) |
| 128-590001-211A4 | 1 Jul 2011 | 400 Series Fault Isolation Manual - applies to 400XP |
| 128-590001-305C | Jan 2012 | 400/400A/Hawker 400XP Airworthiness Limitations Manual |
| 128-590001-79D | 1 Apr 2007 | 400A Wiring Diagram Manual (RK-1 thru RK-48 except RK-45) |
| 128-590001-81A24 | 1 Oct 2013 | 400, 400A and MU-300 Component Maintenance Manual (RJ-1 & after; RK-1 & after; MU-300-10 (Diamond II) Serials A1001SA (RJ-1) thru A1011SA (RJ-11)) |
| 128-590001-9C26 | 1 Oct 2013 | 400 Series Maintenance Manual (RK-1 & after; RJ-1 & after) - adds TRs 27-3, 12-2, 05-7 |
| RVSM-400A | -- | RVSM Data Package |

Diamond 1/1A (IML-MU300 REV 14) OCT 2013

| <u>Part Number</u> | <u>Pub Date</u> | <u>Description</u> |
|--------------------|-----------------|--|
| 128-590001-81A24 | 1 Oct 2013 | 400, 400A and MU-300 Component Maintenance Manual (RJ-1 & after; RK-1 & after; MU-300-10 (Diamond II) Serials A1001SA (RJ-1) thru A1011SA (RJ-11)) |
| MR-0462B4 | 1 Jan 2012 | Diamond 1/1A MU-300 Maintenance Manual w/TR 05-4, 12-1 and 20-1 (Tool & Equipment Manual incorporated at B reissue) w/TRs 05-6, 12-1, 12-2, 27-1 |
| MR-0464-4B5 | 1 Jan 2012 | Diamond 1/1A MU-300 Maintenance Requirements Manual |
| MR-0465-1B | 31 Dec 2005 | MU-300 Illustrated Parts Catalog |
| MR-0467-1 | 5 Jan 1984 | Diamond 1/1A MU-300 Wiring Diagram Manual (w/TR 23-1 and 30-1) |
| MR-0468-2 REV 3 | 10 Jun 1994 | Diamond 1/1A MU-300 Structural Repair Manual (with TR's 53-1, 55-1, 55-2 & 57-1) |

Hawker 800 (IML-800 REV 58) JUN 2013

| <u>Part Number</u> | <u>Pub Date</u> | <u>Description</u> |
|-------------------------------|-----------------|---|
| 125/H-20 Rev 18 | 1 Dec 2012 | AMM Chapter 20 Standard Practices - Airframe |
| 25-8PF315-1 | Issue 1 | Hawker 800/800XP Pressure Refueling Instructions for Aircraft with Ventral Tank |
| 25-8PF317-3 | Issue 1 | Hawker 800/800XP Pressure Refueling Instructions for Aircraft without Ventral Tank |
| AFMS-800 Rev 16 | 1 Jun 2012 | Aircraft Flexible Maintenance Schedule (w/TR 2-4 dated Jun 2012) |
| AMM-125-800-V1-V2 Rev 55 | 1 Jun 2013 | Hawker 800 Maintenance Manual |
| AMM-125-800-V3 Rev 27 | Mar 2009 | Aircraft Maintenance Manual - Vol 3 |
| CCM-125 Rev 3 | Jan 2008 | Corrosion Control Manual |
| CJE-HPA-C-GEN-AW1667 Issue 10 | 10 Mar 2012 | Airworthiness Limitations Document (not available in paper) |
| IPC-125-800 Rev 56 | Dec 2012 | Illustrated Parts Catalog (not available in paper) |
| ITEM-125-1/1000 Rev 6 | 1 Dec 2012 | Illustrated Tool and Equipment Manual |
| MOP 306094A6 | 1 Dec 2012 | Maintenance & Operational Procedures for the Master Minimum Equipment List (MMEL) (not available in paper) |
| NDT-125-1/800 Rev 32 | Jan 2008 | Non-Destructive Test Manual |
| OM-125-800 Rev 32 | 1 Dec 2012 | 800/800XP/850XP/750/900XP Overhaul Manual |
| PBM-125-800 Rev 3 | Mar 2003 | Power Plant Build Manual |
| RVSM Data - 800 | | Reduced Vertical Separation Minimum (RVSM) Data Pkg for Hawker 800 |
| SRM-125-800 Rev 41 | 1 Jun 2013 | Structural Repair Manual (Hawker 800/800XP/850XP/750/900XP) |
| SWD-125-800 Rev 1 | Aug 2001 | Schematic WDM (258091 thru 258276 except 258266). Note: this document may be used as reference only for the 800XP. There is no 800XP schematic wiring diagram manual. |
| WPC-125-800 Rev 20 | Jun 2013 | Wiring Parts Catalog (258091 thru 258276 except 258266) (not available in paper) |

Hawker 800XP/850XP (IML-800XP REV 63) JUN 2013

| <u>Part Number</u> | <u>Pub Date</u> | <u>Description</u> |
|-------------------------------|-----------------|--|
| 125/H-20 Rev 18 | 1 Dec 2012 | AMM Chapter 20 Standard Practices - Airframe |
| 140-590032-0011K | 1 Mar 2013 | Wiring Parts Catalog (with Pro Line 21 Avionics) (not available in paper) |
| 140-590032-0013A24 | Jun 2013 | Aircraft Maintenance Manual (with Pro Line 21 Avionics) |
| 140-590032-0025D2 | Apr 2009 | Ground Handling Checklist |
| 140-590032-0131 | 1 Jun 2013 | ICA - 900XP with Kit 140-9004 |
| 140-590037-0089A2 | 1 Jun 2013 | Power Plant Build Manual (for Hawker 800XP/850X) with Kit 140-9004 |
| 25-8PF315-1 | Issue 1 | Hawker 800/800XP Pressure Refueling Instructions for Aircraft with Ventral Tank |
| 25-8PF317-3 | Issue 1 | Hawker 800/800XP Pressure Refueling Instructions for Aircraft without Ventral Tank |
| AFMS-800XP Rev 27 | 1 Jun 2013 | Aircraft Flexible Maintenance Schedule |
| AMM-800XP-V1-V2-V3 Rev 32 | 1 Jun 2013 | Aircraft Maintenance Manual |
| CCM-125 Rev 3 | Jan 2008 | Corrosion Control Manual |
| CJE-HPA-C-GEN-AW1667 Issue 10 | 10 Mar 2012 | Airworthiness Limitations Document |
| IPC-800XP Rev 35 | 1 Jun 2013 | Illustrated Parts Catalog (not available in paper) |
| ITEM-125-1/1000 Rev 6 | 1 Dec 2012 | Illustrated Tool and Equipment Manual |
| MMA-800XP Rev 19 | 1 Jun 2013 | Aircraft Maintenance Manual Addenda |
| MOP 306094A6 | 1 Dec 2012 | Maintenance & Operational Procedures for the Master Minimum Equipment List (MMEL) |
| NDT-125-1/800 Rev 32 | Jan 2008 | Non-Destructive Test Manual |
| OM-125-800 Rev 32 | 1 Dec 2012 | 800/800XP/850XP/750/900XP Overhaul Manual |
| PATS-IPC-RP-693 | Jun 1996 | Hawker 800XP GTCP36-150W Auxiliary Power Unit Illustrated Parts Catalog |
| PATS-MM-RP-720 APPENDIX A | Jan 2008 | PATS 800XP/850XP/750/900XP GTCP36-150W APU Maintenance Manual Supplement Appendix |
| PBM-800XP Rev 4 | Jan 2008 | Power Plant Build Manual |

| | | |
|--------------------|------------|--|
| RVSM DATA - 800XP | | Reduced Vertical Separation Minimum (RVSM) Data Pkg for Hawker 800XP/850XP |
| SRM-125-800 Rev 41 | 1 Jun 2013 | Structural Repair Manual (Hawker 800/800XP/850XP/750/900XP) |
| WPC-800XP Rev 21 | 1 Dec 2012 | Wiring Parts Catalog (258266, 258277 thru 258540, 258542 thru 258555, 258557 thru 258566) (not available in paper) |

Hawker 800/800XP/850XP (IML-800/800XP) (SEE INDIVIDUAL P/N)

| <u>Part Number</u> | <u>Pub Date</u> | <u>Description</u> |
|--|-----------------|--------------------|
| (All publications listed in IML-800 and IML-800XP/850XP) | | |

Hawker 750 (IML-750 REV 24) SEPT 2013

| <u>Part Number</u> | <u>Pub Date</u> | <u>Description</u> |
|-------------------------------|-----------------|---|
| 125/H-20 Rev 18 | 1 Dec 2012 | AMM Chapter 20 Standard Practices - Airframe |
| 140-590032-0025D2 | Apr 2009 | Ground Handling Checklist |
| 140-590039-0011K | 1 Mar 2013 | Hawker 750 Wiring Parts Catalog |
| 140-590039-0013A12 | 1 Sept 2013 | Hawker 750 Aircraft Maintenance Manual |
| 140-590039-0027A6 | 1 Jun 2013 | Hawker 750 Maintenance Manual Addenda |
| 140-590039-0091L | 1 Mar 2013 | Hawker 750 Illustrated Parts Catalog |
| 140-590039-PRF | Jul 2007 | Pressure Refueling Instructions |
| AFMS-800XP Rev 27 | 1 Jun 2013 | Aircraft Flexible Maintenance Schedule |
| CCM-125 Rev 3 | Jan 2008 | Corrosion Control Manual |
| CJE-HPA-C-GEN-AW1667 Issue 10 | Mar 2012 | Airworthiness Limitations Document |
| ITEM-125-1/1000 Rev 6 | 1 Dec 2012 | Illustrated Tools and Equipment Manual |
| MOP 306094A6 | 1 Dec 2012 | Maintenance & Operational Procedures for the Master Minimum Equipment List (MMEL) |
| NDT-125-1/800 Rev 32 | Jan 2008 | Non-Destructive Test Manual |
| OM-125-800 Rev 32 | 1 Dec 2012 | 800/800XP/850XP/900XP/750 Overhaul Manual |
| PATS-MM-RP-720 APPENDIX A | Jan 2008 | PATS 800XP/850XP/750/900XP GTCP36-150W APU MAINTENANCE MANUAL SUPPLEMENT APPENDIX |
| PBM-800XP Rev 4 | Jan 2008 | Power Plant Build Manual |
| RVSM Data - 750 | | Reduced Vertical Separation Minimum (RVSM) Data Pkg for Hawker 750 |
| SRM-125-800 Rev 41 | 1 Jun 2013 | Structural Repair Manual (Hawker 800/800XP/850XP/900XP/750) |

Hawker 900XP (IML-900XP REV 25) SEPT 2013

| <u>Part Number</u> | <u>Pub Date</u> | <u>Description</u> |
|-------------------------------|-----------------|--|
| 125/H-20 Rev 18 | 1 Dec 2012 | AMM Chapter 20 Standard Practices - Airframe |
| 140-590032-0025D2 | Apr 2009 | Ground Handling Checklist |
| 140-590037-0011K | 1 Mar 2013 | Hawker 900XP Wiring Parts Catalog (not available in paper) |
| 140-590037-0013A12 | 1 Sept 2013 | Aircraft Maintenance Manual |
| 140-590037-0027A7 | 1 Jun 2013 | Hawker 900XP Maintenance Manual Addenda |
| 140-590037-0089A2 | 1 Jun 2013 | Hawker 900XP Power Plant Build Manual |
| 140-590037-0091K | 1 Mar 2013 | Hawker 900XP Illustrated Parts Catalog (not available in paper) |
| 140-590037-PRF | Jul 2007 | Pressure Refueling Instructions |
| AFMS-800XP Rev 27 | 1 Jun 2013 | Aircraft Flexible Maintenance Schedule |
| CCM-125 Rev 3 | Jan 2008 | Corrosion Control Manual |
| CJE-HPA-C-GEN-AW1667 Issue 10 | 1 Mar 2012 | Airworthiness Limitations Document (not available in paper) |
| ITEM-125-1/1000 Rev 6 | 1 Dec 2012 | Illustrated Tool & Equipment Manual |
| MOP 306094A6 | 1 Dec 2012 | Maintenance & Operational Procedures for the Master Minimum Equipment List (MMEL) (not available in paper) |
| NDT-125-1/800 Rev 32 | Jan 2008 | Non-Destructive Test Manual |
| OM-125-800 Rev 32 | 1 Dec 2012 | 800/800XP/850XP/750/900XP Overhaul Manual |

| | | |
|------------------------------|------------|--|
| PATS-MM-RP-720 APPENDIX A | Jan 2008 | PATS 800XP/850XP/750/900XP GTCP36-150W APU Maintenance Manual Supplement Appendix |
| RVSM DATA - 900XP | | Reduced Vertical Separation Minimum (RVSM) Data Pkg for Hawker 900XP |
| SRM-125-800 Rev 41 | 1 Jun 2013 | Structural Repair Manual (Hawker 800/800XP/850XP/750/900XP) |