



IML Manuals Available on iPad and Android Mobile Devices

Bonanza A36/B36TC/G36 (IML-36 REV 42) JAN 2014

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
33-590010-7H	1 Jul 2012	F33/G33/F33A/F33C Illustrated Parts Catalog (F33 - CD-1235 THRU CD-1254; G33 - CD-1255 thru CD-1304; F33A - CE-290 & after; F33C - CJ-26 & after)
35-590102-11D	1 Apr 2009	A36/B36TC Wiring Diagram Manual (E-1946, E-2104, E-2111 and after; EA-320, EA-389 and after)
35-590102-5E4	Jan 1981	V35B Illustrated Parts Catalog (D-9069 & after)
35-590102-7B1	3 Sept 1982	33,35,36 Wiring Diagram Manual 14V (CE-613 thru CE-771, except CE-748; CJ-105 thru CJ-148; D-9818 thru D-10119, except D-10097; E-710, E-763 thru E-1240, except E-1111)
35-590102-9E1	29 Jan 1999	F33A, F33C, V35B, A36, A36TC, B36TC Wiring Diagram Manual
36-590001-11B	1 May 2008	G36 Maintenance Manual Supplement for Aircraft with Garmin G1000 Equipment Installed (E-3630, E-3636 & After) - available in CD or IML only
36-590001-13E	1 Oct 2013	G36 Wiring Diagram Manual (E-3630, E-3636 & After)
36-590001-15D	Jan 2011	G36 Avionics Wiring Diagram Manual (E-3630, E-3636 & After)
36-590001-1U	Jan 2014	36/G36 Illustrated Parts Catalog (E-1 & after; EA-1 & after)
36-590001-3B16	1 Apr 2011	A36 Shop Manual (E-1 thru E-1240, except E-1111; EA-1 thru EA-10) w/TR's 2-1, 4-3 & 15-1
36-590001-9C7	1 Apr 2013	33, 35, 36 Maintenance Manual (CE-748, CE-772 and after; CJ-149 and after; D-10097, D-10120 and after, E-1111, E-1241 and after; EA-1 and after)
58-590001-11	1 Apr 2012	Bonanza/Baron Series Structural Inspection and Repair Manual
98-32227S	1 Jul 2012	33/35/36 Inspection Guide
98-36711M	1 Jul 2012	Continuing Care Inspection Guide
98-38999L	1 Jul 2012	Short Inspection Guide

Baron 58 Series (IML-58 REV 43) JAN 2014

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
102-590000-21A5	26 Nov 1985	Baron 58P/PA ; 58TC/TCA CMM (TJ-3 & after; TK-1 & after)
102-590000-23E	Jul 1981	58P/TC Wiring Diagram Manual (TJ-2 thru TJ-443, except TJ-436; TK-1 thru TK-56)
102-590000-59	Dec 1983	58P Wiring Diagram Manual (Pressurized) - (TJ-436, TJ-444 & after)
102-590000-5A25	28 Jun 2002	58P/TC Maintenance Manual w/TR 27-3 dated July 2012 (TJ-3 & after; TK-1 & after)
102-590000-7E4	1 Aug 2001	58P/TC Illustrated Parts Catalog (TJ-3 & after; TK-1 & after)
118662Q	Apr 2011	55, 56TC, 58 Long Form Inspection Guide
190-01180-02 REV 2	May 2010	Garmin G1000 System Maintenance Manual for Baron G58 - STC SA01584WI-D
55-590000-13G7	1 Oct 2013	55, 58 Shop Manual (TC-1 & After; TE-1 & after; TH-1 & after)
58-590000-19S	1 Jan 2014	58 Illustrated Parts Catalog (TC-1608 & After, TE-938, TE-943 & After, TH-1 & After)
58-590001-11	1 Apr 2012	Bonanza/Baron Structural Inspection and Repair Manual
58-590001-1C	1 May 2008	Maintenance Manual Supplement (TH-2125 & after) - not available in paper
58-590001-3D	Apr 2013	Wiring Diagram Manual - Electrical (TH-2125 & after)
58-590001-5C	Jan 2011	Wiring Diagram Manual - Avionics (TH-2125 & after)
96-590010-13B3	1 Aug 2001	B55/E55 Illustrated Parts Catalog (TC-1 thru TC-1607; TE-1 thru TE-937, TE-939 thru TE-942)
96-590010-15D1	9 Dec 1983	E55/58 Wiring Diagram Manual (TE-1064 & after; TH-598, TH-648 thru TH-1395, except TH-1389)

96-590010-39	Dec 2006	55/58 Wiring Diagram Manual (TC-1 thru TC-1935, TE-1 thru TE-1063, TH-1 thru 647 except TH-598)
96-590011-15C	19 Mar 1982	Baron B55 Wiring Diagram Manual (TC-1913, TC-1936 & after)
96-590011-29C	1 Apr 2009	58 Electrical Wiring Diagram Manual (TH-1389, TH-1396 thru TH-2124)
98-36712H	Apr 2011	55, 58 Continuing Care Inspection Guide
98-39097J	Apr 2011	55, 56TC, 58 Short Form Inspection Guide

King Air 90 Series (IML-90 REV 46) NOV 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
101-590097-13B7	1 Aug 2013	King Air Component Maintenance Manual (All King Airs)
109-590010-19B6	1 Nov 2012	F90 Maintenance Manual - IML-90 Rev 42 adds TR 27-2 (LA-2 & after)
109-590010-21C2	2 Feb 1996	F90 Wiring Diagram Manual (LA-2 thru LA-225)
109-590010-23E1	28 May 1993	F90 Illustrated Parts Catalog (LA-2 & After)
109-590010-79	30 Nov 1984	F90 Wiring Diagram Manual (LA-226 & after)
65-590016-3F9	27 Mar 1998	90/A90/B90/C90/E90 Illustrated Parts Catalog (LJ-1 thru LJ-501)
90-590012-13B29	1 Nov 2013	90/A90/B90/C90/E90 Maintenance Manual (LJ-1 thru LJ-75; LJ-77 & after; LW-1 & After)
90-590012-15E	6 Jul 1984	90/A90/B90/C90/E90 Wiring Diagram Manual (LJ-1 thru LJ-1062; LW-1 & after)
90-590012-17S	1 Nov 2013	C90/E90 Illustrated Parts Catalog (LJ-502 & after; LW-1 & after)
90-590024-11H	1 May 2013	C90 Wiring Diagram Manual (LJ-1063 & after)
90-590024-173K	1 Nov 2013	C90GTi Illustrated Parts Catalog (LJ-1769, LJ-1847, LJ-1853 & after)
90-590024-175C	1 Nov 2012	C90GTi Avionics Wiring Diagram Manual (LJ-1847, LJ-1853 & after)
90-590024-187	Dec 2011	King Air 90 Series Airworthiness Limitations Manual (LJ-1 & after; LW-1 & after)
98-39006C10	1 Nov 2013	King Air Structural Inspection Repair Manual (B300 Series, 300, 200 Series, 100 Series, 99 Airliner Series, 90 Series, F90, 88, 65, 70, 80 Series, 50 Series)
98-39117J	1 Nov 2012	King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)

King Air 100 Series (IML-100 REV 16) NOV 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
100-590027-3B7	27 Mar 1998	King Air 100 Illustrated Parts Catalog (B-1 & After; BE-1 & After)
100-590038-17A31	1 May 2013	King Air 100 Maintenance Manual (B-1 & After; BE-1 & After)
100-590038-25B2	5 Feb 1982	King Air 100 Series Wiring Diagram Manual (B-1 & after; BE-1 & after)
101-590097-13B7	1 Aug 2013	King Air Component Maintenance Manual (All King Airs)
98-39006C10	1 Nov 2013	King Air Structural Inspection Repair Manual (B300 Series, 300, 200 Series, 100 Series, 99 Airliner Series, 90 Series, F90, 88, 65, 70, 80 Series, 50 Series)
98-39117J	1 Nov 2012	King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)

King Air 200 Series (IML-200 REV 49) NOV 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
101-590010-133E6	31 Oct 2003	200C/CT, B200C/CT Wiring Diagram Manual (BL-1 & after; BN-1 & after)
101-590010-159T	1 Nov 2013	B200 Illustrated Parts Catalog (BB-734, BB-793, BB-829, BB-854 thru BB-870, BB-874 thru BB-891, BB-894 thru BB-911, BB-913 & After; BT-23 thru BT-27, BT-29 & after; BL-37 & after; BN-2 & after)
101-590010-161G	1 Nov 2008	B200 Wiring Diagram Manual (BB-734, BB-793, BB-829, BB-854 thru BB-870, BB-874 thru BB-891, BB-894, BB-896 thru BB-911, BB-913 & after; BT-23 & after)
101-590010-17F	31 Oct 2003	King Air 200 Illustrated Parts Catalog (BB-2 thru BB-733, BB-735 thru BB-792, BB-794 thru BB-828, BB-830 thru BB-853, BB-871 thru BB-873, BB-892, BB-893, BB-912; BT-1 thru BT-22; BL-1 thru BL-36; BN-1 only)
101-590010-19C14	1 Nov 2013	200 Series Maintenance Manual (BB-2 & after; BL-1 & after; BT-1 & after; BN-1 & after; BY-1 & after; BZ-1 & after)
101-590010-39D4	26 Feb 1999	King Air 200/200T Wiring Diagram Manual (BB-2, BB-6 thru BB-733, BB-735 thru BB-792, BB-794 thru BB-828, BB-830 thru BB-853, BB-871 thru BB-873, BB-892, BB-893, BB-912; BT-1 thru BT-22)
101-590010-433E	1 Feb 2012	King Air B200/T/C/CT Wiring Diagram Manual (BB-1834, BB-1843 & after; BT-47 & after; BL-148 & after; BN-10 & after; BY-1 & after; BZ-1 & after)

101-590010-453C	1 May 2011	Airworthiness Limitations Manual
101-590097-13B7	1 Aug 2013	King Air Component Maintenance Manual (All King Airs)
101-590168-15M	1 Nov 2013	B200GT/CGT Illustrated Parts Catalog (BY-1 & after; BZ-1 & after)
98-39006C10	1 Nov 2013	King Air Structural Inspection Repair Manual (B300 Series, 300, 200 Series, 100 Series, 99 Airliner Series, 90 Series, F90, 88, 65, 70, 80 Series, 50 Series)
98-39117J	1 Nov 2012	King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)
RVSM-B200	--	RVSM Data Package

King Air 300 Series (IML-300 REV 51) NOV 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
101-590097-13B7	1 Aug 2013	King Air Component Maintenance Manual (All King Airs)
101-590097-15D1	18 Dec 1992	King Air 300 Wiring Diagram Manual (FA-2 & After)
101-590097-161	1 May 2011	300/300LW Airworthiness Limitations Manual
101-590097-7C	30 Jun 2004	King Air 300/300W Illustrated Parts Catalog (FA-1 & after)
101-590097-9A35	1 Nov 2012	Model 300/300LW Maintenance Manual FA-2 & after)
130-590031-11A36	1 Nov 2013	B300 (350) Maintenance Manual (FL-1 & after; FM-1 & after)
130-590031-197D	1 Aug 2010	Avionics Wiring Diagram Manual B300/B300C (FL-381, FL-383 & after; FM-12 & after)
130-590031-205A4	14 Sept 2007	350ER Maintenance Manual, Illustrated Parts Catalog and Wiring Diagram Manual Supplement (airplanes w/ Collins HF-9000 (W/ SELCAL), Collins FMS-3000 (with 4 search patterns) and Honeywell LaserRef V Inertial Reference Unit)
130-590031-211C	1 May 2011	Airworthiness Limitations Manual (FL-1 & after; FM-1 & after)
130-590031-247	1 May 2012	350ER/CER Supplements (AMM, IPC, and WDM) - The -247 manual has been superseded and all information transferred to the B300 AMM, WDM, IPC and 350i WDM and IPC.
130-590031-315J	1 Nov 2013	Super King Air 350i/350C Illustrated Parts Catalog (FL-601, FL-672, FL-688 & after with Cabin Management System installed; FM-36 & after)
130-590031-317F	1 May 2013	Super King 350i Wiring Diagram Manual (Interiors) (FL-601, FL-672, FL-688 & after)
130-590031-401	Oct 2010	King Air 350i/350C Instructions for Continued Airworthiness for the Zero Interior Configuration
130-590031-7H	1 Nov 2013	B300 Wiring Diagram Manual (FL-1 & after; FM-1 & after)
130-590031-9P	1 Nov 2013	B300 Illustrated Parts Catalog (FL-1 & after; FM-1 & after)
98-39006C10	1 Nov 2013	King Air Structural Inspection Repair Manual (B300 Series, 300, 200 Series, 100 Series, 99 Airliner Series, 90 Series, F90, 88, 65, 70, 80 Series, 50 Series)
98-39117J	1 Nov 2012	KingAir/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)
RVSM-B300	--	RVSM Data Package

Airliner 99 Series (IML-99 REV 16) NOV 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
98-30131A3	1 May 2008	99 Continued Airworthiness Inspection Manual
98-39006C10	1 Nov 2013	King Air Structural Inspection Repair Manual (B300 Series, 300, 200 Series, 100 Series, 99 Airliner Series, 90 Series, F90, 88, 65, 70, 80 Series, 50 Series)
98-39117J	1 Nov 2012	King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)
99-590014L	1 Nov 2013	Illustrated Parts Catalog (99, 99A, A99A, B99)
99-590015-1C3	1 May 2013	99 Maintenance Manual (U-1 & after)
99-590015-5B4	27 Sept 2002	99 Series Component Maintenance Manual (not available in paper)
99-590028A5	4 Apr 2000	Wiring Diagram Manual (99, 99A, A99A, B99)
99-590030-5B2	13 Feb 1987	Wiring Diagram Manual (C99)
99-590031-1G	1 Nov 2013	Illustrated Parts Catalog (C99)

Commuter 1900/1900C (IML-1900/C REV 50) NOV 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
114-590021-11B19	May 2011	1900 Series Component Maintenance Manual with TR 21-1 (UA-1 & after; UB-1 & after; UC-1 & after, UE-1 & after) - not available in paper
114-590021-13H	1 Nov 2012	1900C Wiring Diagram Manual (UB-1 thru UB-74)

114-590021-197A6	1 May 2010	Corrosion Control Manual
114-590021-59M	1 Nov 2013	1900C Illustrated Parts Catalog (UC-1 and after)
114-590021-5P	1 Nov 2013	1900C Illustrated Parts Catalog (UA-1 and after; UB-1 and after)
114-590021-61F	1 Nov 2012	1900C Wiring Diagram Manual (UC-1 and after)
114-590021-7C10	1 Nov 2013	1900/C Maintenance Manual (UA-1 & after; UB-1 & after; UC-1 & after)
114-590021-9C1	1 May 2011	1900 Series Structural Repair Manual
129-590000-131H	1 Nov 2013	1900/C/D Kit Supplement Illustrated Parts Catalog (UA-1 and after; UB-1 and after; UC-1 and after; UE-1 and after)
129-590000-133B	1 Oct 2012	1900 Airliner Series Airworthiness Limitations Manual (UA-1 & after; UB-1 & after; UC-1 & after; UE-1 & after)
98-30937G2	May 2013	1900C Structural Inspection Manual
98-39117J	1 Nov 2012	King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)

Commuter 1900D (IML-1900D REV 51A) DEC 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
114-590021-11B19	May 2011	1900 Series Component Maintenance Manual - not available in paper
114-590021-197A6	1 May 2010	Corrosion Control Manual
114-590021-9C1	1 May 2011	1900 Series Structural Repair Manual
129-590000-109A2	30 Apr 2004	1900D Airliner Maintenance Manual Supplement for Airplanes with the FA2100 Flight Data Recorder Installed (Applicable to 129-590000-15)
129-590000-11M	1 Nov 2013	1900D Illustrated Parts Catalog (UE-1 and after) - not available in paper
129-590000-131H	1 Nov 2013	1900/C/D Kit Supplement Illustrated Parts Catalog (UA-1 and after; UB-1 and after; UC-1 and after; UE-1 and after)
129-590000-133B	1 Oct 2012	1900 Airliner Series Airworthiness Limitations Manual (UA-1 & after; UB-1 & after; UC-1 & after; UE-1 & after)
129-590000-13G	1 Nov 2012	1900D Wiring Diagram Manual (UE-2 and after)
129-590000-15B9	1 Nov 2013	1900D Maintenance Manual (UE-1 and after) - includes TR 52-1 dated Dec 2013
129-590000-65E5	1 May 2013	1900D Structural Inspection Manual
98-39117J	1 Nov 2012	King Air/1900 Series Printed Circuit Board Manual (All King Air and Airliner Series)

Beechjet/Hawker 400XP (IML-400/A REV 49) JAN 2014

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
128-590001-11Q	1 Jan 2014	Beechjet 400/A/Hawker 400XP Illustrated Parts Catalog (RJ-1 & after; RK-1 & after)
128-590001-147C1	1 Dec 2007	Beechjet 400/A/Hawker 400XP Wiring Diagram Manual (RK-45, RK-49 and after)
128-590001-17C13	1 Oct 2013	400/A Structural Repair Manual
128-590001-183B	1 Jul 2007	400A Printed Circuit Board Manual (RK-1 & after) - applies to 400XP
128-590001-19B1	20 Dec 1999	400 Wiring Diagram Manual (RJ-1 thru RJ-65)
128-590001-211A4	1 Jul 2011	400 Series Fault Isolation Manual - applies to 400XP
128-590001-305C	Jan 2012	400/400A/Hawker 400XP Airworthiness Limitations Manual
128-590001-79D	1 Apr 2007	400A Wiring Diagram Manual (RK-1 thru RK-48 except RK-45)
128-590001-81A24	1 Oct 2013	400, 400A and MU-300 Component Maintenance Manual (RJ-1 & after; RK-1 & after; MU-300-10 (Diamond II) Serials A1001SA (RJ-1) thru A1011SA (RJ-11))
128-590001-9C26	1 Oct 2013	400 Series Maintenance Manual (RK-1 & after; RJ-1 & after) - adds TRs 27-3, 12-2, 05-7
RVSM-400A	--	RVSM Data Package

Diamond 1/1A (IML-MU300 REV 14) OCT 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
128-590001-81A24	1 Oct 2013	400, 400A and MU-300 Component Maintenance Manual (RJ-1 & after; RK-1 & after; MU-300-10 (Diamond II) Serials A1001SA (RJ-1) thru A1011SA (RJ-11))
MR-0462B4	1 Jan 2012	Diamond 1/1A MU-300 Maintenance Manual w/TR 05-4, 12-1 and 20-1 (Tool & Equipment Manual incorporated at B reissue) w/TRs 05-6, 12-1, 12-2, 27-1
MR-0464-4B5	1 Jan 2012	Diamond 1/1A MU-300 Maintenance Requirements Manual
MR-0465-1B	31 Dec 2005	MU-300 Illustrated Parts Catalog

MR-0467-1	5 Jan 1984	Diamond 1/1A MU-300 Wiring Diagram Manual (w/TR 23-1 and 30-1)
MR-0468-2 REV 3	10 Jun 1994	Diamond 1/1A MU-300 Structural Repair Manual (with TR's 53-1, 55-1, 55-2 & 57-1)

Hawker 800 (IML-800 REV 60) MAR 2014

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
125/H-20 Rev 19	1 Dec 2013	AMM Chapter 20 Standard Practices - Airframe
25-8PF315-1	Issue 1	Hawker 800/800XP Pressure Refueling Instructions for Aircraft with Ventral Tank
25-8PF317-3	Issue 1	Hawker 800/800XP Pressure Refueling Instructions for Aircraft without Ventral Tank
AFMS-800 Rev 16	1 Jun 2012	Aircraft Flexible Maintenance Schedule (w/TR 2-4 dated Jun 2012)
AMM-125-800-V1-V2 Rev 55	1 Jun 2013	Hawker 800 Maintenance Manual
AMM-125-800-V3 Rev 27	Mar 2009	Aircraft Maintenance Manual - Vol 3
CCM-125 Rev 3	Jan 2008	Corrosion Control Manual
CJE-HPA-C-GEN-AW1667 Issue 10	10 Mar 2012	Airworthiness Limitations Document (not available in paper)
IPC-125-800 Rev 56	Dec 2012	Illustrated Parts Catalog (not available in paper)
ITEM-125-1/1000 Rev 7	1 Dec 2013	Illustrated Tool and Equipment Manual
MOP 306094A7	Mar 2014	Maintenance & Operational Procedures for the Master Minimum Equipment List (MMEL) (not available in paper)
NDT-125-1/800 Rev 32	Jan 2008	Non-Destructive Test Manual
OM-125-800 Rev 33	1 Dec 2013	800/800XP/850XP/750/900XP Overhaul Manual
PBM-125-800 Rev 3	Mar 2003	Power Plant Build Manual
RVSM Data - 800		Reduced Vertical Separation Minimum (RVSM) Data Pkg for Hawker 800
SRM-125-800 Rev 41	1 Jun 2013	Structural Repair Manual (Hawker 800/800XP/850XP/750/900XP)
SWD-125-800 Rev 1	Aug 2001	Schematic WDM (258091 thru 258276 except 258266). Note: this document may be used as reference only for the 800XP. There is no 800XP schematic wiring diagram manual.
WPC-125-800 Rev 20	Jun 2013	Wiring Parts Catalog (258091 thru 258276 except 258266) (not available in paper)

Hawker 800XP/850XP (IML-800XP REV 65) MAR 2014

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
125/H-20 Rev 19	1 Dec 2013	AMM Chapter 20 Standard Practices - Airframe
140-590032-0011L	1 Mar 2014	Wiring Parts Catalog (with Pro Line 21 Avionics) (not available in paper)
140-590032-0013A25	Dec 2013	Aircraft Maintenance Manual (with Pro Line 21 Avionics)
140-590032-0025D2	Apr 2009	Ground Handling Checklist
140-590032-0131	1 Jun 2013	ICA - 900XP with Kit 140-9004
140-590037-0089A2	1 Jun 2013	Power Plant Build Manual (for Hawker 800XP/850X) with Kit 140-9004)
25-8PF315-1	Issue 1	Hawker 800/800XP Pressure Refueling Instructions for Aircraft with Ventral Tank
25-8PF317-3	Issue 1	Hawker 800/800XP Pressure Refueling Instructions for Aircraft without Ventral Tank
AFMS-800XP Rev 28	1 Dec 2013	Aircraft Flexible Maintenance Schedule
AMM-800XP-V1-V2-V3 Rev 32	1 Jun 2013	Aircraft Maintenance Manual
CCM-125 Rev 3	Jan 2008	Corrosion Control Manual
CJE-HPA-C-GEN-AW1667 Issue 10	10 Mar 2012	Airworthiness Limitations Document
IPC-800XP Rev 36	1 Mar 2014	Illustrated Parts Catalog (electronic only)
ITEM-125-1/1000 Rev 7	1 Dec 2013	Illustrated Tool and Equipment Manual
MMA-800XP Rev 19	1 Jun 2013	Aircraft Maintenance Manual Addenda
MOP 306094A7	Mar 2014	Maintenance & Operational Procedures for the Master Minimum Equipment List (MMEL)
NDT-125-1/800 Rev 32	Jan 2008	Non-Destructive Test Manual
OM-125-800 Rev 33	1 Dec 2013	800/800XP/850XP/750/900XP Overhaul Manual
PATS-IPC-RP-693	Jun 1996	Hawker 800XP GTCP36-150W Auxiliary Power Unit Illustrated Parts Catalog

PATS-MM-RP-720 APPENDIX A	Jan 2008	PATS 800XP/850XP/750/900XP GTCP36-150W APU Maintenance Manual Supplement Appendix
PBM-800XP Rev 4	Jan 2008	Power Plant Build Manual
RVSM DATA - 800XP		Reduced Vertical Separation Minimum (RVSM) Data Pkg for Hawker 800XP/850XP
SRM-125-800 Rev 41	1 Jun 2013	Structural Repair Manual (Hawker 800/800XP/850XP/750/900XP)
WPC-800XP Rev 21	1 Dec 2012	Wiring Parts Catalog (258266, 258277 thru 258540, 258542 thru 258555, 258557 thru 258566) (not available in paper)

Hawker 750 (IML-750 REV 26) MAR 2014

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
125/H-20 Rev 19	1 Dec 2013	AMM Chapter 20 Standard Practices - Airframe
140-590032-0025D2	Apr 2009	Ground Handling Checklist
140-590039-0011L	1 Mar 2014	Hawker 750 Wiring Parts Catalog
140-590039-0013A12	1 Sept 2013	Hawker 750 Aircraft Maintenance Manual
140-590039-0027A6	1 Jun 2013	Hawker 750 Maintenance Manual Addenda
140-590039-0091M	1 Mar 2014	Hawker 750 Illustrated Parts Catalog
140-590039-PRF	Jul 2007	Pressure Refueling Instructions
AFMS-800XP Rev 28	1 Dec 2013	Aircraft Flexible Maintenance Schedule
CCM-125 Rev 3	Jan 2008	Corrosion Control Manual
CJE-HPA-C-GEN- AW1667 Issue 10	Mar 2012	Airworthiness Limitations Document
ITEM-125-1/1000 Rev 7	1 Dec 2013	Illustrated Tools and Equipment Manual
MOP 306094A7	Mar 2014	Maintenance & Operational Procedures for the Master Minimum Equipment List (MMEL)
NDT-125-1/800 Rev 32	Jan 2008	Non-Destructive Test Manual
OM-125-800 Rev 33	1 Dec 2013	800/800XP/850XP/900XP/750 Overhaul Manual
PATS-MM-RP-720 APPENDIX A	Jan 2008	PATS 800XP/850XP/750/900XP GTCP36-150W APU MAINTENANCE MANUAL SUPPLEMENT APPENDIX
PBM-800XP Rev 4	Jan 2008	Power Plant Build Manual
RVSM Data - 750		Reduced Vertical Separation Minimum (RVSM) Data Pkg for Hawker 750
SRM-125-800 Rev 41	1 Jun 2013	Structural Repair Manual (Hawker 800/800XP/850XP/900XP/750)

Hawker 900XP (IML-900XP REV 27) MAR 2014

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
125/H-20 Rev 19	1 Dec 2013	AMM Chapter 20 Standard Practices - Airframe
140-590032-0025D2	Apr 2009	Ground Handling Checklist
140-590037-0011L	1 Mar 2014	Hawker 900XP Wiring Parts Catalog (not available in paper)
140-590037-0013A13	1 Mar 2014	Aircraft Maintenance Manual
140-590037-0027A7	1 Jun 2013	Hawker 900XP Maintenance Manual Addenda
140-590037-0089A2	1 Jun 2013	Hawker 900XP Power Plant Build Manual
140-590037-0091L	1 Mar 2014	Hawker 900XP Illustrated Parts Catalog (not available in paper)
140-590037-PRF	Jul 2007	Pressure Refueling Instructions
AFMS-800XP Rev 28	1 Dec 2013	Aircraft Flexible Maintenance Schedule
CCM-125 Rev 3	Jan 2008	Corrosion Control Manual
CJE-HPA-C-GEN- AW1667 Issue 10	1 Mar 2012	Airworthiness Limitations Document (not available in paper)
ITEM-125-1/1000 Rev 7	1 Dec 2013	Illustrated Tool & Equipment Manual
MOP 306094A7	Mar 2014	Maintenance & Operational Procedures for the Master Minimum Equipment List (MMEL) (not available in paper)
NDT-125-1/800 Rev 32	Jan 2008	Non-Destructive Test Manual
OM-125-800 Rev 33	1 Dec 2013	800/800XP/850XP/750/900XP Overhaul Manual
PATS-MM-RP-720 APPENDIX A	Jan 2008	PATS 800XP/850XP/750/900XP GTCP36-150W APU Maintenance Manual Supplement Appendix

HS 125-600 Series (IML-600 REV 31) MAR 2014

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
125/H-20 Rev 19	1 Dec 2013	AMM Chapter 20 Standard Practices - Airframe
CCM-125 Rev 3	Jan 2008	125 Series 1-1000, Hawker 800, 1000, 800XP Corrosion Control Manual
CJE-HPA-C-GEN-AW1667 Issue 10	1 Mar 2012	DH/BH/HS/Bae 125, Hawker 800, Hawker 1000 & Hawker 800XP Airworthiness Limitations Document
IPC-125-600/700 Rev 2	Dec 2012	125 Series 600A, 600B, F600A, F600B, 700A & B, Illustrated Parts Catalog. This manual is considered a "Second Edition" because of the previous master file. Individual 600/700 models no longer available.
ITEM-125-1/1000 Rev 7	1 Dec 2013	Hawker 125 Series 1 thru 1000 Illustrated Tools and Equipment Manual
MM-125-600-V1-V2 Rev 53	Jun 2003	BH 125 Series 600A, HS Series 600B with Viper Engines, Aircraft Maintenance Manual, Vol 1 & 2 (TR 12-4 & TR 35-1)
MM-125-601-V3 Rev 23	Jun 2003	BH 125 Series 600A, HS Series 600B, Aircraft Maintenance Manual, Vol 3, Rolls-Royce Viper 601 Engine (Not available in paper)
MM-125-F600G-V1-V2 Rev 54	Jun 2003	BH 125 Series 600A (with Mod 252468), HS Series F600B, with Garrett Engines, Aircraft Maintenance Manual, Vol 1 & 2 (TR 12-2 & TR 35-1)
MM-125-F600G-V3 Rev 21	Jun 2003	BH 125 Series 600A (with Mod 252468), HS Series F600B, Aircraft Maintenance Manual, Vol 3, Garrett Engines
MOP 306094A7	Mar 2014	Maintenance & Operational Procedures for the Master Minimum Equipment List (MMEL)
MS-125-600 Rev 12	1 Jun 2012	125 Series 600A & 600B Aircraft Maintenance Schedule
NDT-125-1/800 Rev 32	Jan 2008	125 Series 1-800 Non-Destructive Test Manual
OM-125-1/700 Rev 76	1 Dec 2012	125 Series 1 to 700 Overhaul Manual
SRM-125-600/700 Rev 26	Dec 2010	125 Series 600 & 700 Structural Repair Manual

HS 125-700 Series (IML-700 REV 31) MAR 2014

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
125/H-20 Rev 19	1 Dec 2013	AMM Chapter 20 Standard Practices - Airframe
AFMS-125-700 Rev 11	1 Jun 2012	125 Series 700A & 700B Aircraft Flexible Maintenance Schedule
CCM-125 Rev 3	Jan 2008	125 Series 1-1000, Hawker 800, 1000, 800XP Corrosion Control Manual
CJE-HPA-C-GEN-AW1667 Issue 10	1 Mar 2012	DH/BH/HS/Bae 125, Hawker 800, Hawker 1000 & Hawker 800XP Airworthiness Limitations Document
IPC-125-600/700 Rev 2	1 Dec 2012	125 Series 600A, 600B, F600A, F600B, 700A & B, Illustrated Parts Catalog. This manual is considered a "Second Edition" because of the previous master file. Individual 600/700 models no longer available.
ITEM-125-1/1000 Rev 7	1 Dec 2013	Hawker 125 Series 1 thru 1000 Illustrated Tools and Equipment Manual
MM-125-700AG-V3 Rev 28	Dec 2002	125 Series 700A & 700B Aircraft Maintenance Manual, Vol 3, Garrett Engines with Thrust Reversers (Mod 256991)
MM-125-700-V1-V2 Rev 55	Feb 2007	125 Series 700A & 700B Aircraft Maintenance Manual, Vol 1 & 2 (TR 12-2 & TR 35-1)
MM-125-700-V3 Rev 25	Dec 2002	125 Series 700A & 700B Aircraft Maintenance Manual, Vol 3, Garrett Engines
MOP 306094A7	Mar 2014	Maintenance & Operational Procedures for the Master Minimum Equipment List (MMEL)
NDT-125-1/800 Rev 32	Jan 2008	125 Series 1-800 Non-Destructive Test Manual
OM-125-1/700 Rev 76	1 Dec 2012	125 Series 1 to 700 Overhaul Manual
SRM-125-600/700 Rev 26	Dec 2010	125 Series 600 & 700 Structural Repair Manual

Hawker 1000 Series (IML-1000 REV 30) DEC 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
125/H-20 Rev 19	1 Dec 2013	AMM Chapter 20 Standard Practices - Airframe
25-9PF212-1	Issue 2	Hawker 1000 Pressure Refueling Instructions
AFMS-1000 Rev 15	1 Jun 2012	Aircraft Flexible Maintenance Schedule

AMM-125-1000-V1-V2-V3 Rev 30	Dec 2012	Aircraft Maintenance Manual
CCM-125 Rev 3	Jan 2008	Corrosion Control Manual
CJE-HPA-C-GEN- AW1667 Issue 10	1 Mar 2012	Airworthiness Limitations Document
DDG-1000	Jul 1998	Dispatch Deviation Guide
IPC-125-1000 Rev 24	1 Dec 2012	Illustrated Parts Catalog
ITEM-125-1/1000 Rev 7	1 Dec 2013	Illustrated Tools and Equipment Manual
NDT-125-1000 Rev 4	Jun 2007	Non-Destructive Test Manual
OM-125-1000 Rev 10	1 Dec 2012	Overhaul (Component Maintenance) Manual
PBM-125-1000	31 May 1994	Power Plant Build Manual
SRM-125-1000 Rev 20	Dec 2006	Structural Repair Manual (contains TR 54-30-00-01, Feb 99)
SWD-125-1000	--	Schematic Wiring Diagram Manual
WPC-125-1000 REV 12	Dec 2012	Wiring Parts Catalog

Premier I/IA (IML-390 REV 47) OCT 2013

<u>Part Number</u>	<u>Pub Date</u>	<u>Description</u>
390-590001-0011K	1 Oct 2013	Illustrated Parts Catalog
390-590001-0013B	1 Jan 2013	Wiring Diagram Manual
390-590001-0015A40	1 Apr 2013	Maintenance Manual
390-590001-0017A21	1 Apr 2013	Component Maintenance Manual
390-590001-0019A14	1 Apr 2013	Structural Repair Manual (RB-2 & after)
390-590001-0081K	Jun 2012	Airworthiness Limitations Manual (RB-2 & after)
RVSM-Premier	--	RVSM Data Package